



ORMA

Vertical Modular Formwork

Strong, versatile and suitable to be used in many applications

Construcción



IMPORTANT:

Any safety provisions as directed by the appropriate governing agencies must be observed when using our products.

The pictures in this brochure are snapshots of situations at different stages of assembly, and therefore are not complete images. For the purpose of safety, they should not be deemed as definitive.


All of the indications regarding safety and operations contained in this brochure, and the data on stress and loads should be respected. ULMA Construcción's Technical Department must be consulted anytime that field changes alter our equipment installation drawings.

Our equipment is designed to work with accessories and elements made by our company only. Combining such equipment with other systems is not only dangerous but also voids any or all our warranties.

The company reserves the right to introduce any modifications deemed necessary for the technical development of the product.

All rights reserved

Neither all nor part of this document may be reproduced or transmitted in any way by any electronic or mechanical procedure, including photocopy, magnetic recording or any other form of information storage or retrieval system without the written permission of **ULMA Construcción**.

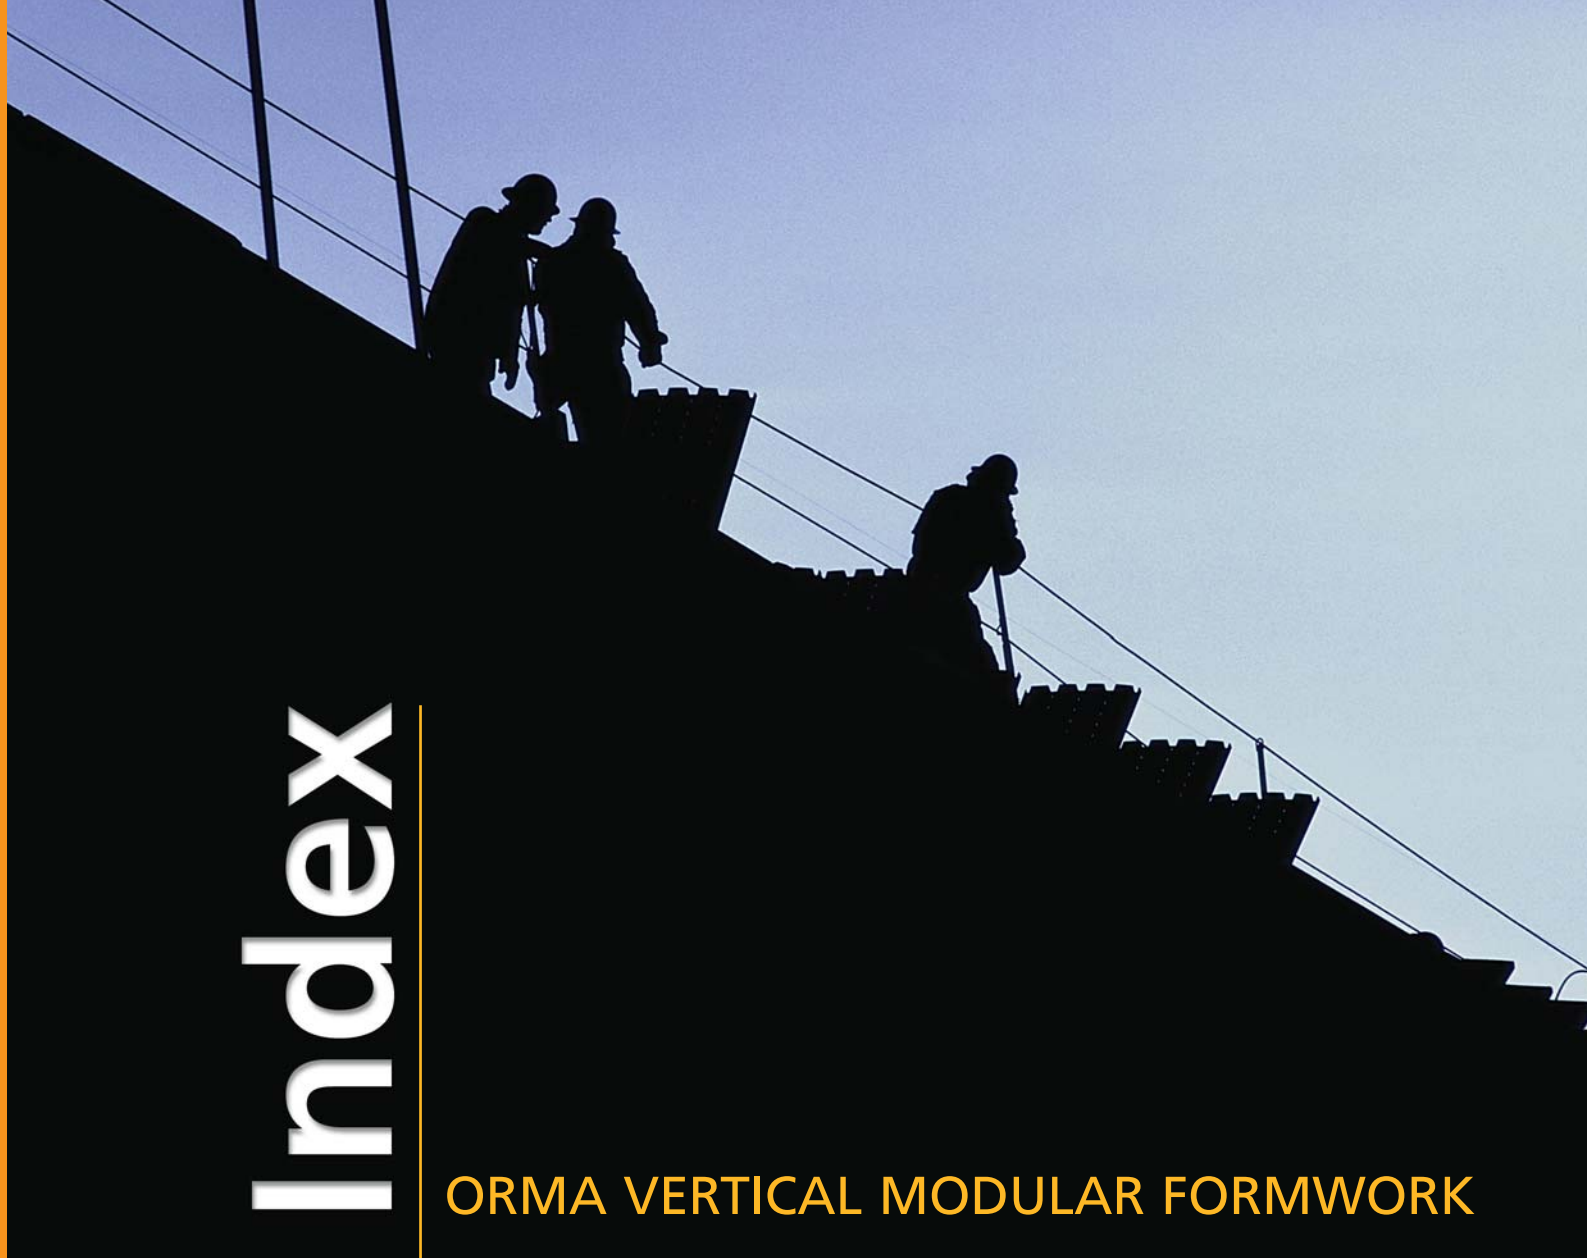

Index

ORMA VERTICAL MODULAR FORMWORK

4	Product description
7	Basic system components
27	Basic assembly process
32	Technical solutions
57	Handling and repair
59	Components and accessories
68	ULMA Construcción addresses
72	Our products

▶ Product description

Safety and special features

The **ORMA Modular Formwork system** provides solutions for the execution of any type of vertical structure, no matter how risky it may seem: **walls, columns, abutments, foundations...** It is suitable for framing any geometrical shape.

The high performance of this system is guaranteed for any type of construction job, whether constructing buildings or other civil engineering projects.

The system is comprised mainly of panels, joined by clamps, available in gangs that make up the formwork. ORMA has elements or accessories that **efficiently and safely provide solutions for all types of geometries.**



Primary characteristics:

- ▶ System certified by the German organization **GSV*** according to established guidelines and requirements.
- ▶ System designed to support **high concrete pressures.**
- ▶ **Wide range** of panels, the largest being 2.7x2.4m (6.48m²).
- ▶ **Robust panel** formed by a metal frame with reinforced corners.
- ▶ The plywood shuttering face provides **excellent surface finishes.**
- ▶ Panels are joined by **clamps** with the strike of a hammer to form large gangs, which can then be lifted.
- ▶ The wide range of **Column Panels** provides solutions for columns of any dimension and height.
- ▶ **Safety elements** are easily fastened to panels, thus always guaranteeing safe system use.



***GSV:** World renowned international organization that is constituted of major formwork manufacturers. GSV establishes strict design, manufacturing and control requirements, thus guaranteeing product quality.


More information:
www.gsv-betonschalungen.de





■ Possibilities of the ORMA system: Features and solutions

① Climbing systems	⑧ 90° wall intersections
② One face formwork support	⑨ Fillers
③ Columns	⑩ ORMA-BRIO Bracket
④ Pilasters	⑪ Walkway bracket
⑤ 90° corners	⑫ ORMA Platform
⑥ Hinged corners	⑬ Post bracket
⑦ Bulkheads	

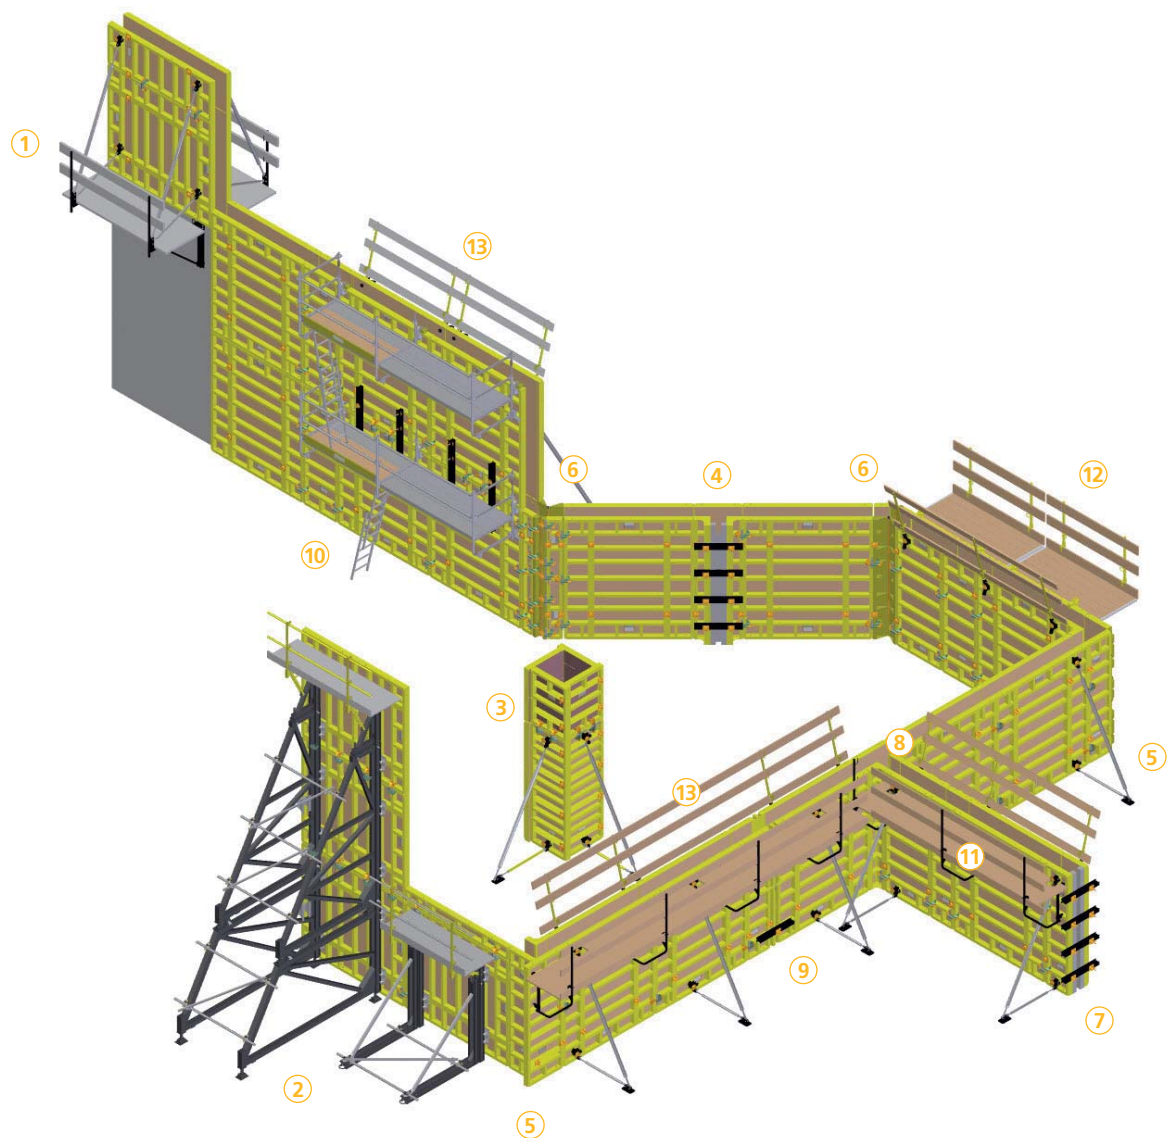

► Basic system components


Versatile and capable of adapting to all ULMA
Construcción vertical systems

ULMA Construcción is committed to making versatile products with the objective of **maximizing product performance and minimizing costs of construction**. Accordingly, the ORMA Modular Formwork system is comprised of a series of components that, for the most part, can be used in conjunction with different ULMA Construcción vertical formwork systems.





■ Panels:

A perfect custom concrete finishing

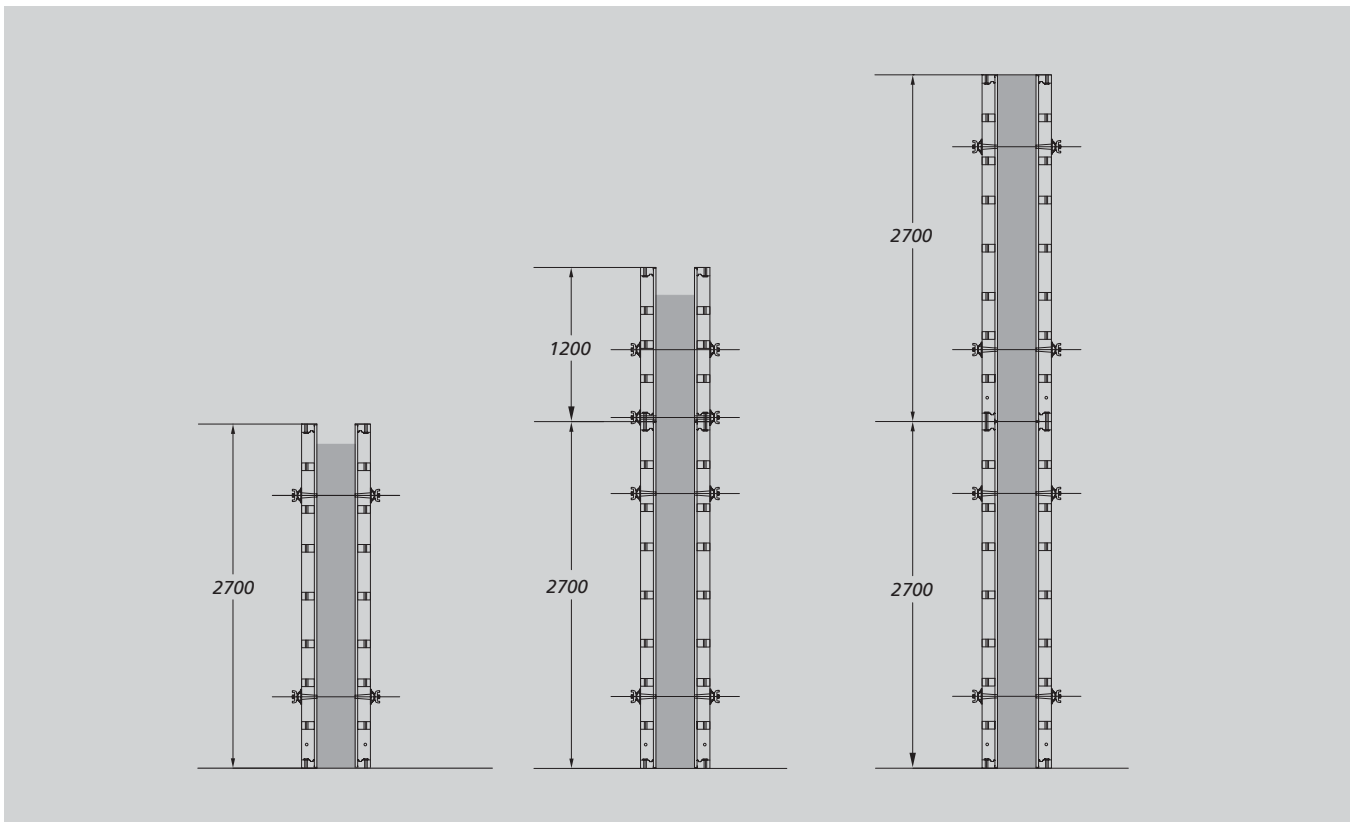


► Certification GSV:

- Maximum load pressure: 60 kN/m².
- Maximum deflections: 60 kN/m² (line 6, tab.3 DIN 18202)

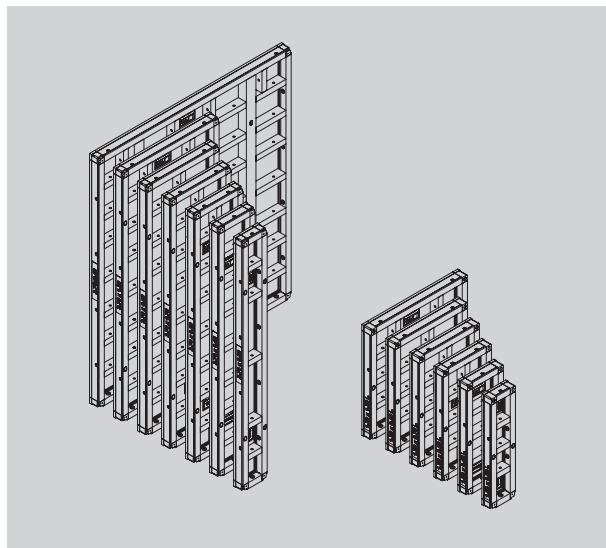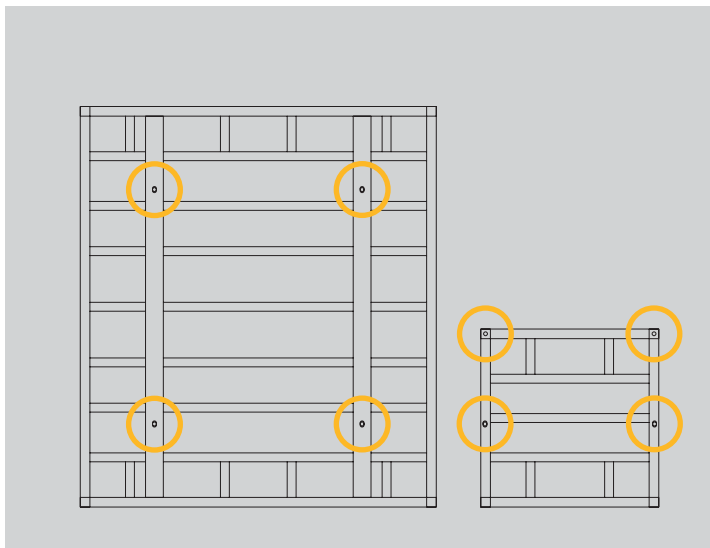


▲ Three **ranges of panel heights**: 2.7m and 1.2m panels. These are completely compatible and can be assembled in vertical or horizontal position.


▲ **Width range**: 0.3 / 0.45 / 0.6 / 0.75 / 0.9 / 1.2 and 2.4 m. Gangs can be laid out every 15 cm by combining different panels.

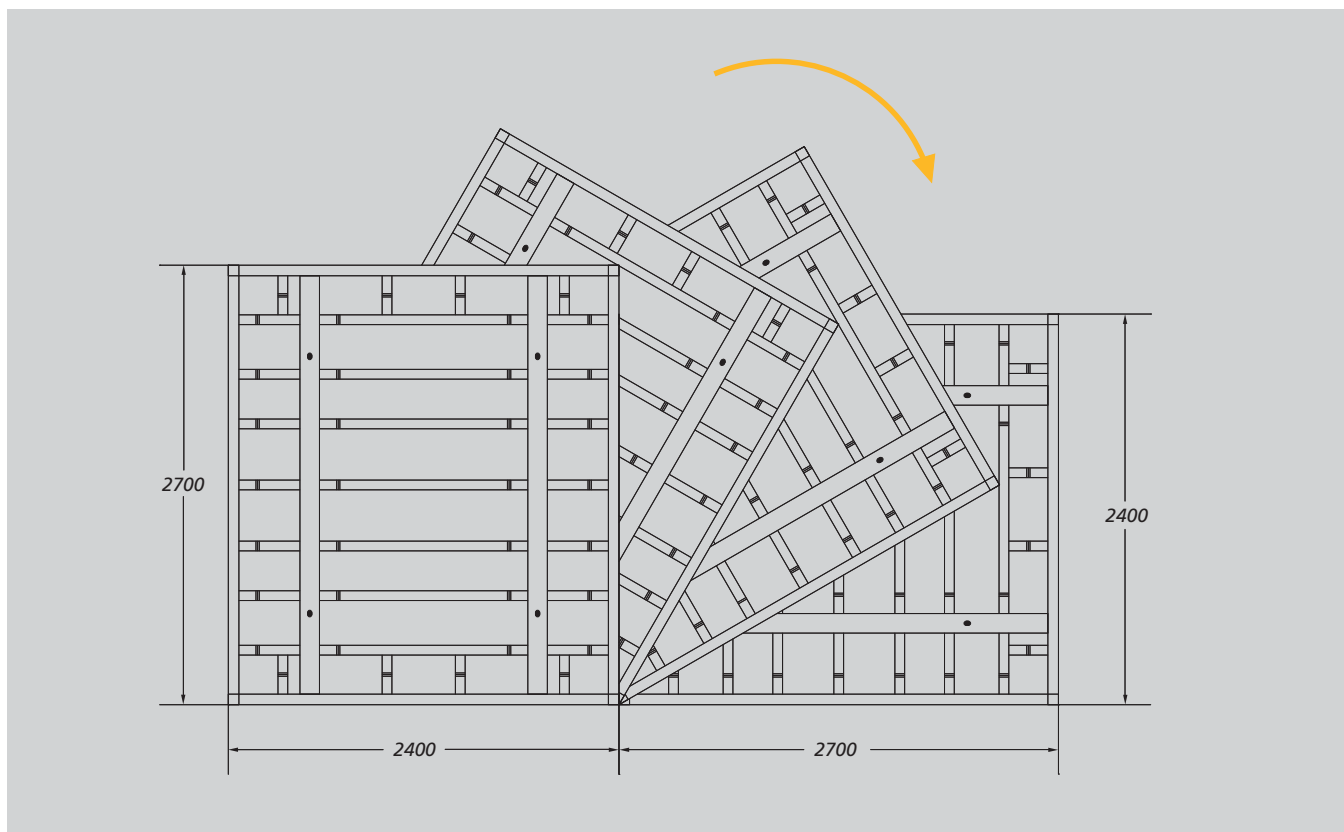


- The metal frame is formed by a perimeter profile and reinforced corners capable of absorbing impacts and avoiding breakage due to incorrect use. The clamp is the component used to join the panels profile to make gangs.

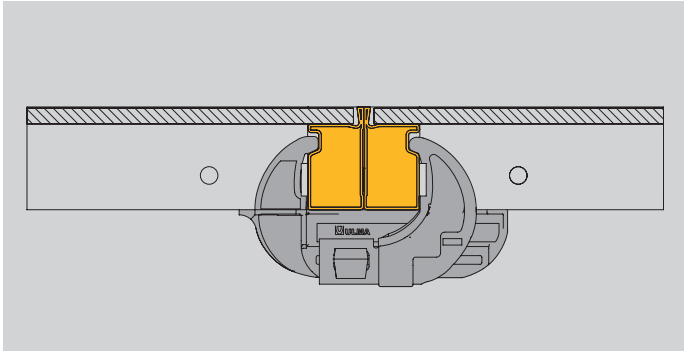

▲ Universal Panel- Wall panel joint

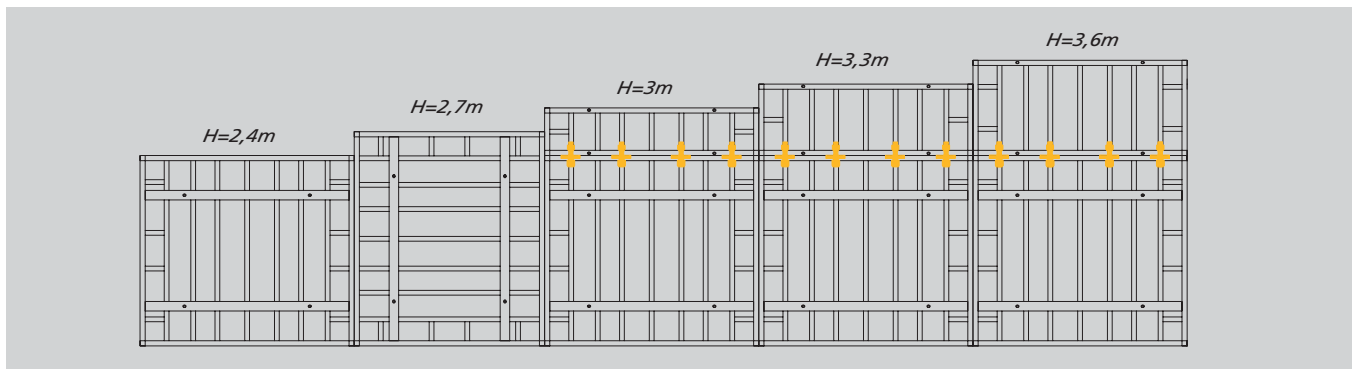

▲ ORMA Panel's height range (from 2,4 m to 3,6 m)

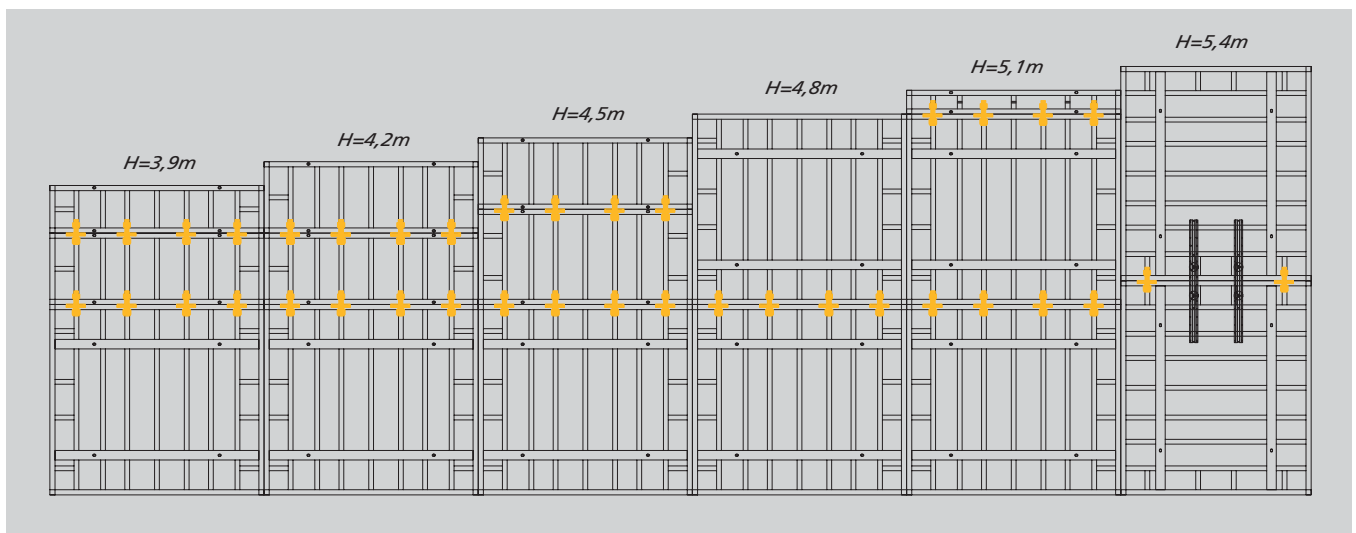

▲ ORMA Panel's height range (from 3,9 m to 5,4 m)

ORMA VERTICAL MODULAR FORMWORK

- The shuttering face of the 18mm **thick plywood** is riveted to the metal structure. Its edges and tie holes are protected against impact and moisture.





Column Panel

Multiple applications

The Column Panel has U-shaped ribs with multipunched holes every 5 cm for fixing them with universal panel bolts and nuts through the lateral holes that have these panels.



Universal Panels can also be used as wall panels, so they have tie holes in the perimeter profile where Tie Rods can be inserted.

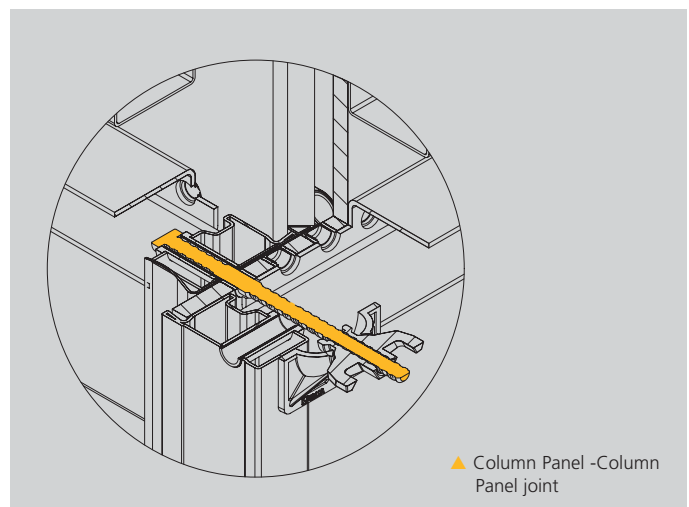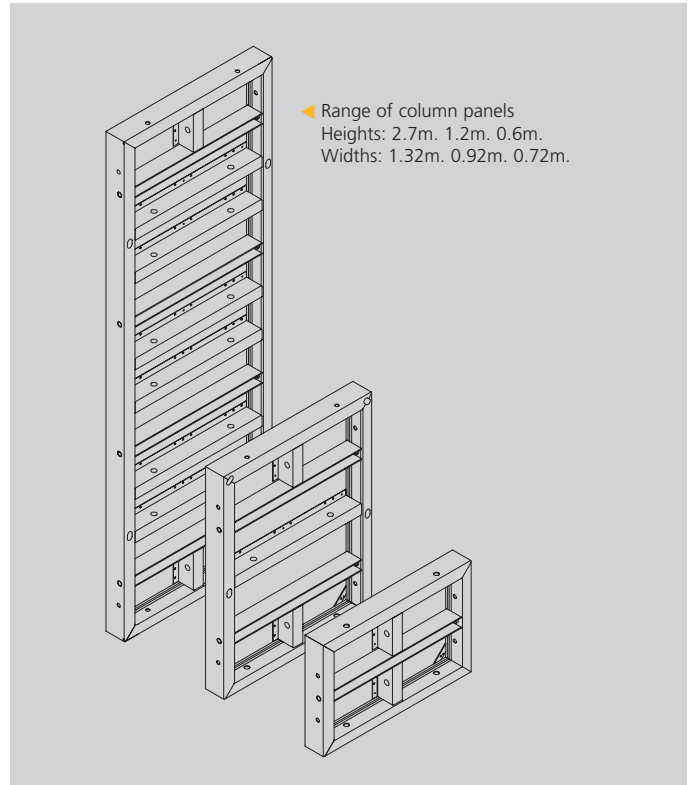

Clamps:

Fast and simple connection


Adjustable Clamp

Guaranteed strong joints and fast assembly

This is the main component used to **join panels**. **With one single strike of the hammer**, it can be used to make gangs **that are assured to be tight joint, no any concrete leak**. All panel joints, whether vertical or horizontal, can be formed with this clamp.

• It has three basic functions:

- Joining
- Aligning
- Stiffening

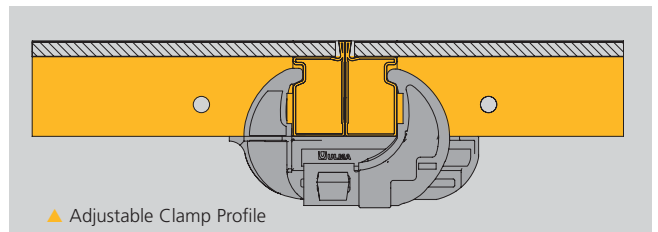

▲ Adjustable Clamp Profile



▲ Ease of installation



▲ The tightness of the joint is assured




▲ This clamp can cover fillers between panels up to 10 cm wide


Fixed Clamp

Guaranteed tight joint

Panel joint component that cannot be used in conjunction with compensation. Just as with the Adjustable Clamp, all panel joints can be formed with this clamp.

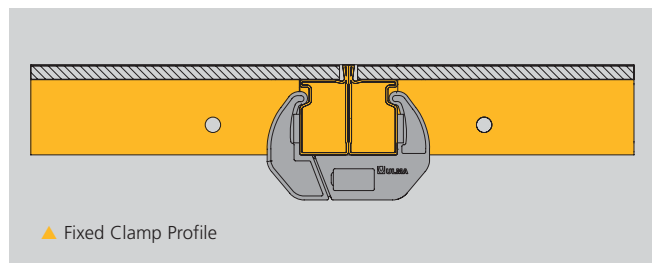

▲ The clamp joins panels in the edge

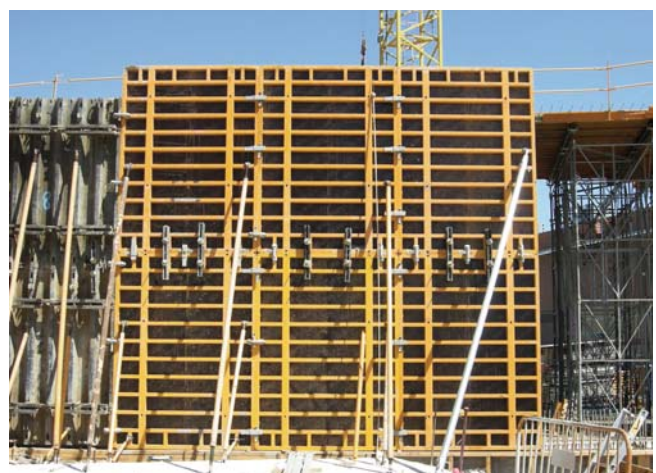

Waler:

Fixing for lifting

Auxiliary part used to lift gangs and align compensation.


Two Waler Hooks are used to fix this elements to the panel.





▲ These pieces provide rigidity and stability in hoisting



▲ Waler Hook detail

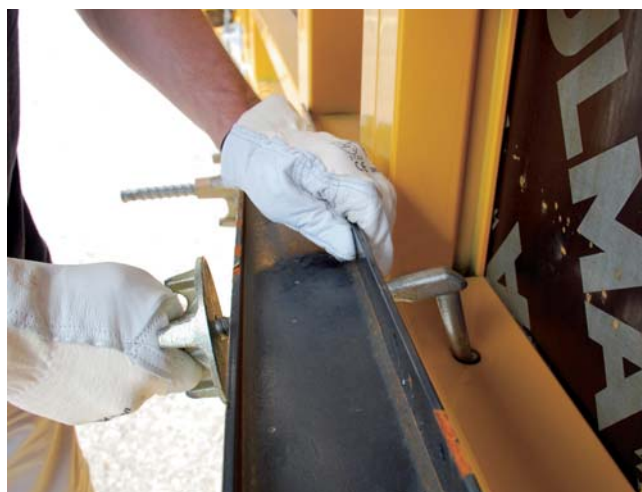



▲ Anchor of the Waler Hook in ORMA's Panel

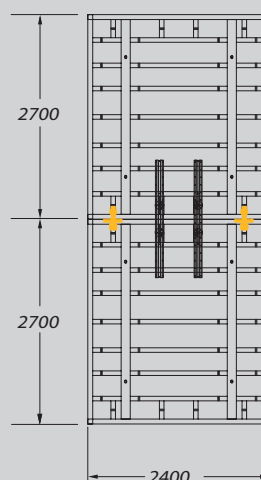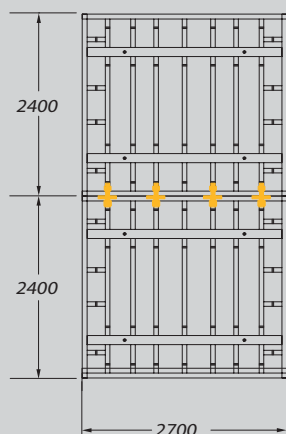


▲ Stiffness system



▲ Walers in fillers

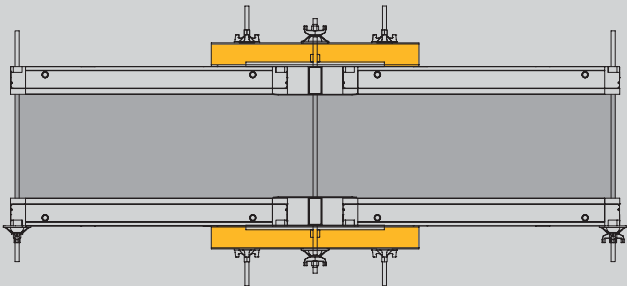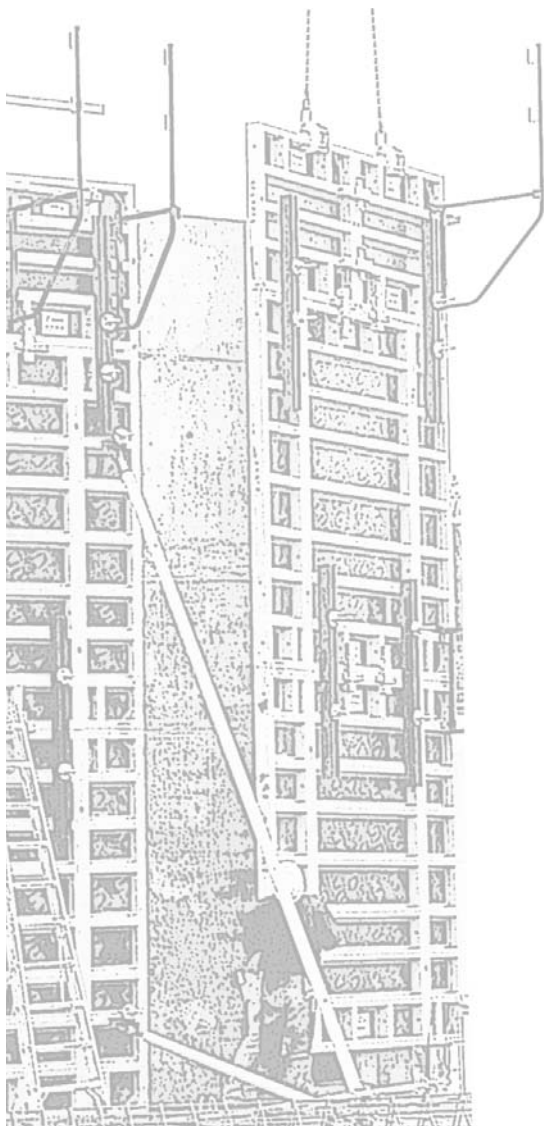

▲ Filler detail using Walers

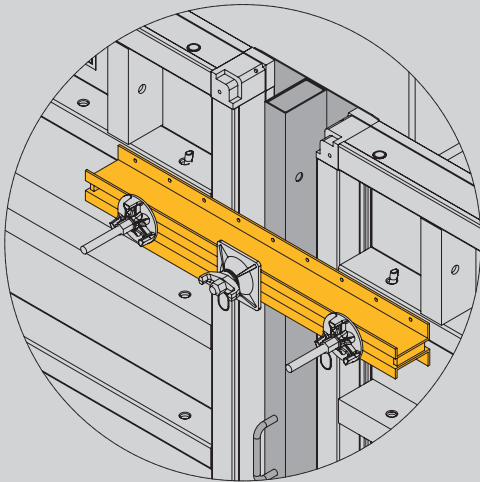

▲ Filler detail using Walers

Tying System:

This tying system is strong enough to support the high pressures exerted when concrete is poured

This is an assembly formed by Tie Rods and nuts specially designed to support high concrete pressures.

The ORMA system joins panels face-to-face using Tie Rods and their respective tying elements.


To permit recovering material and reusing it, the rods are protected by plastic tubes that are inserted between face-to-face panels. In addition, they maintain the proper spacing and thickness of the wall to be executed.

Ø15mm and Ø20mm Tie Rods can be used with the ORMA system.



▲ The Plate Washer Nut is the tying system's anchoring component. It is capable of supporting small inclinations in the rods.

NAME 15 mm Tie		NAME 20 mm Tie
Spacer Tube 22/25		Spacer Tube 32/36
Cone 22		Cone 32
Tie Rod 15		Tie Rod 20
Plate Washer Nut 15		Plate Washer Nut 20

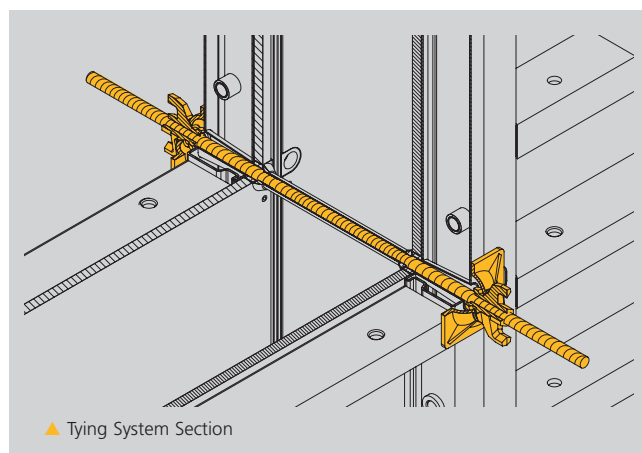

▲ The nut design allows the entering of Tie Rod



Lifting:

Completely safe and resistant gang lifting

The ORMA Lifting Hook is an auxiliary component used in conjunction with a crane to lift single panels or gangs of panels.


With maximum load capacity of **1500 kg** per unit, it is recommended to use two lifting hooks when lifting.

The following certifications guarantee that it is a safe component:


- The “CE” mark corresponds to European Directive 98/37/CE on machinery, and the maintenance control plate is provided to verify when maintenance work has been performed.
- The “GS” seal means that the system has been inspected by the Construction Committee of the “Office for Testing and Certifications” of BG-PRÜFZERT in Germany.



MAX. WORKING LOAD 1500kg (3300 lbs)	ULMA ULMA C y E, Scoop. Ps. Otadui, 3 - Apdo. 13 20560 OÑATI (SPAIN)
30° MAX. CHAIN ANGLE	CE
ORMA LIFTING HOOK 1900179	

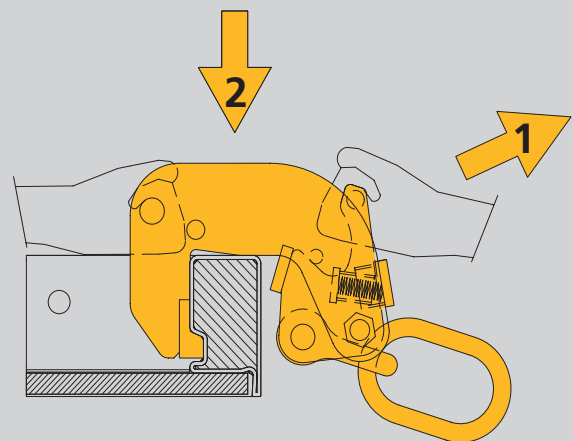

▲ Detail of the Lifting Hook fixed to the Panel

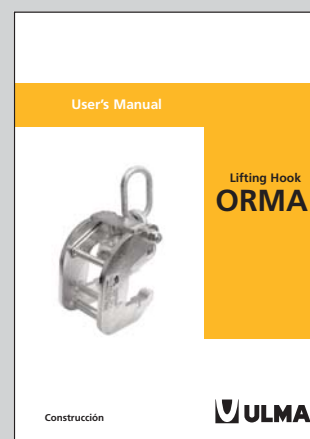

➤ For further information, read the ORMA Lifting Hook User's Manual



▲ It is recommended to use two lifting hooks when lifting



▲ Lifting gangs including working platform in different levels



▲ ORMA Lifting Hook

■ Safety Elements:

Everyday safety

ULMA Construcción strives daily to assure **complete, personal and collective protection for workers and third parties alike**. The company provides the same care for its products as it does for its professionals, always seeking to obtain the pertinent certifications from accredited companies. All of its systems incorporate **safety elements to protect personnel when assembling and using** the system.

► Work Platforms:

Stable and safe working area

Work at high elevations, such as those reached when pouring concrete or installing different elements on top of the formwork, should be carried out from **safe and stable** work platforms that prevent workers from falling.


The ORMA system provides different solutions to build working platforms:

■ Walkway bracket:


Safe support at high elevations

This accessory, support for the working platform, is fixed by passing the rods through the tie holes on the horizontal ribs or by tying them to the vertical tubes. The abutment is supported by the lower ribs.

This component can also be used with other ULMA Construcción vertical formwork systems.

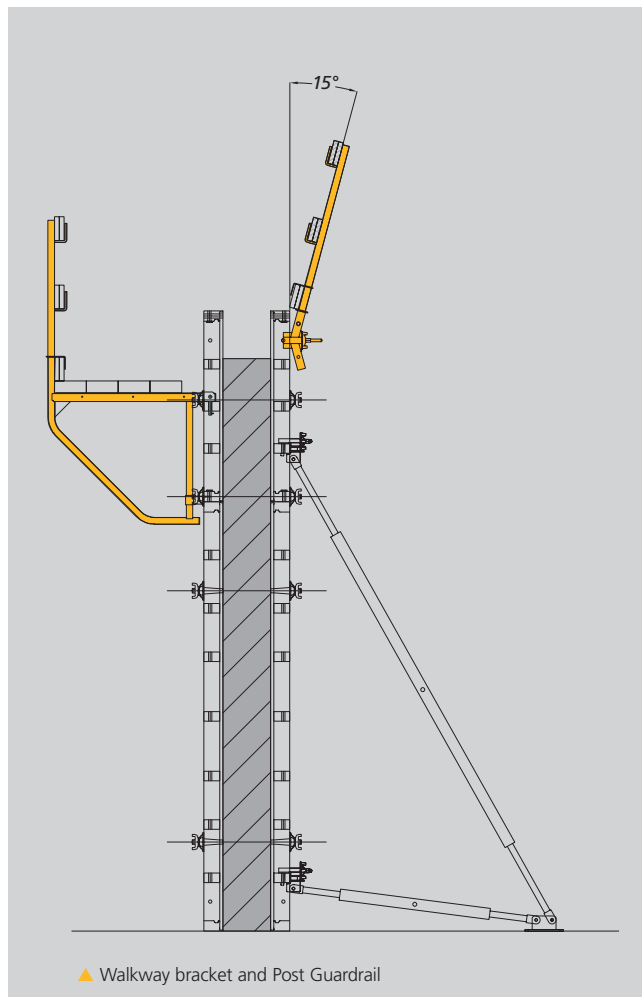

▲ Detail: fixed to a vertical rib

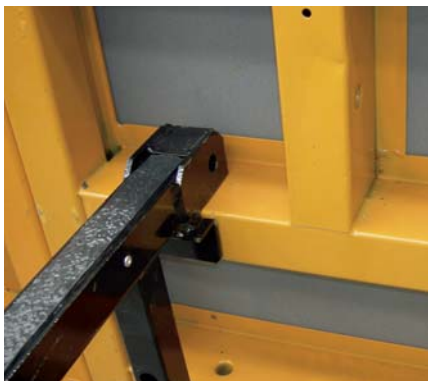

▲ Detail: fixed to a horizontal rib



▲ Safety pin in bracket

ORMA VERTICAL MODULAR FORMWORK


It includes elements that allow precisely **installing handrails and toeboards** using planks.

The work platform is created by nailing various planks to the top of the plastic block on the walkway bracket.



The same bracket system can be assembled on the opposite panel, or a safety handrail, using the **Post Bracket and the Safety Handrail Post**.



The lateral sides of the platform can be covered using **Clamps Safety Handrail**.

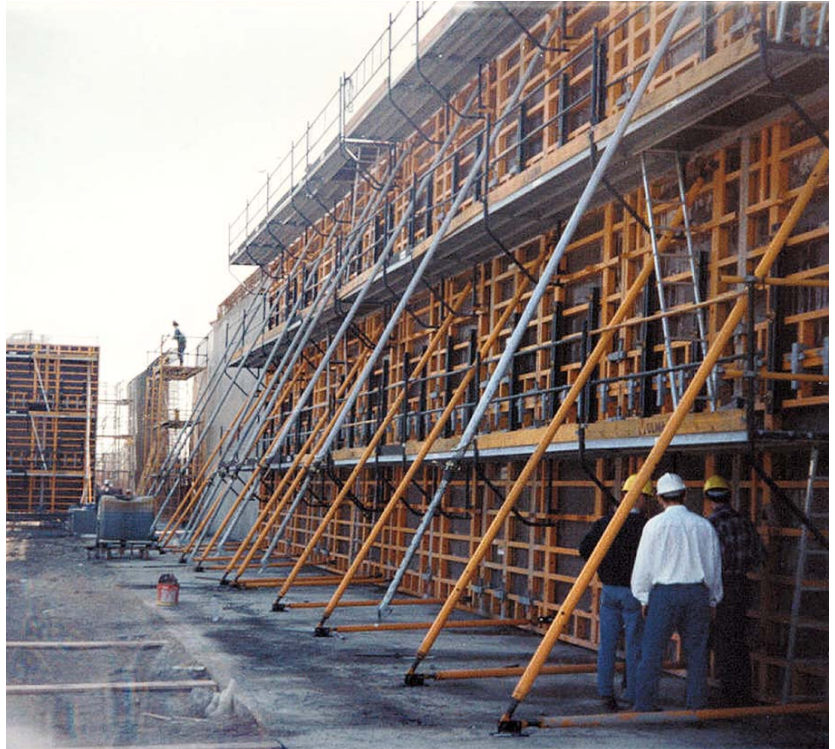

■ ORMA-BRIO Bracket

Complete safety for high elevation jobs

The **ORMA-BRIO bracket** has a **welded clamp** which is used to fix the bracket to the formwork on any point on the exterior profile along the panel joint, on the top of the formwork or even in intermediate positions.

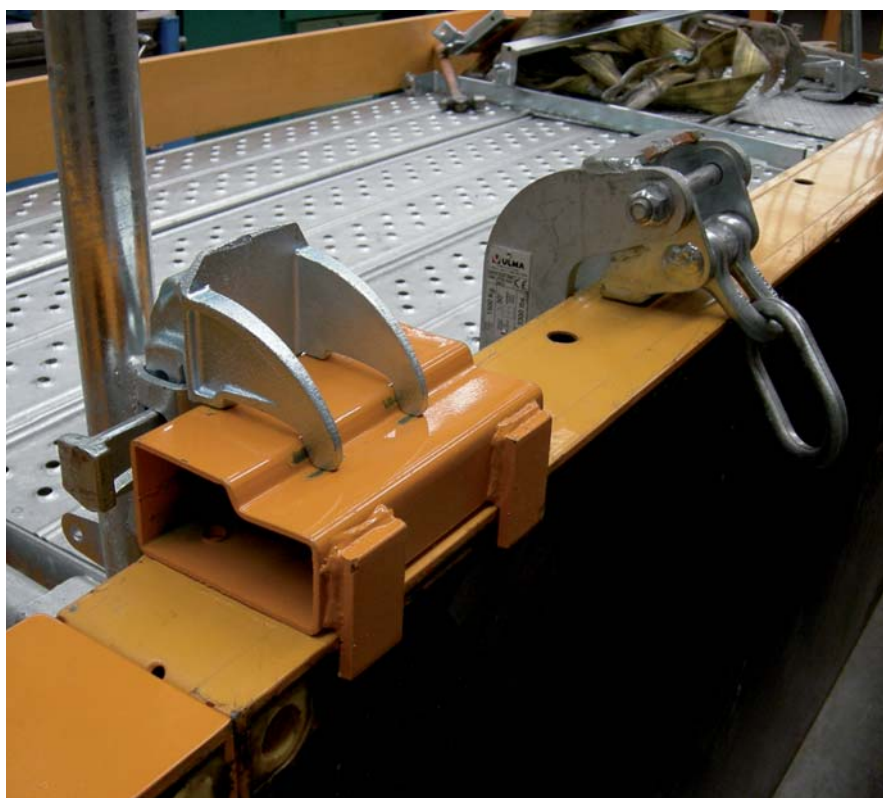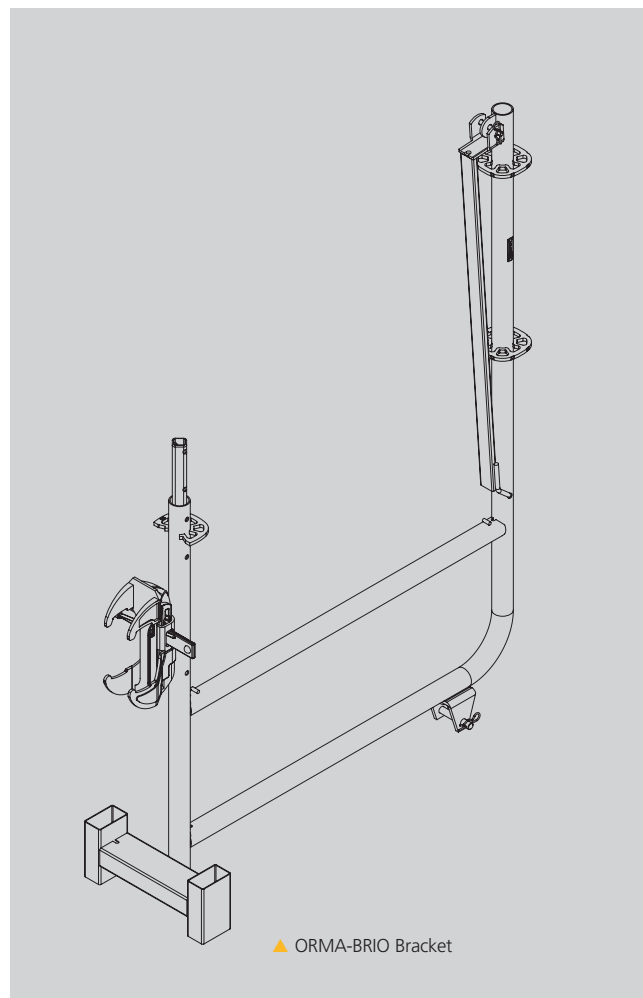


This bracket uses **BRIO Multidirectional Scaffolding standard elements**, thus guaranteeing the **versatility and safety** provided by this certified scaffolding.



The metal platforms, either with or without trapdoor, are installed on top of the **Bracket** in the same way as the elements for the **handrail** and toe **board**.

The trapdoor platform includes a ladder to access to different working levels.

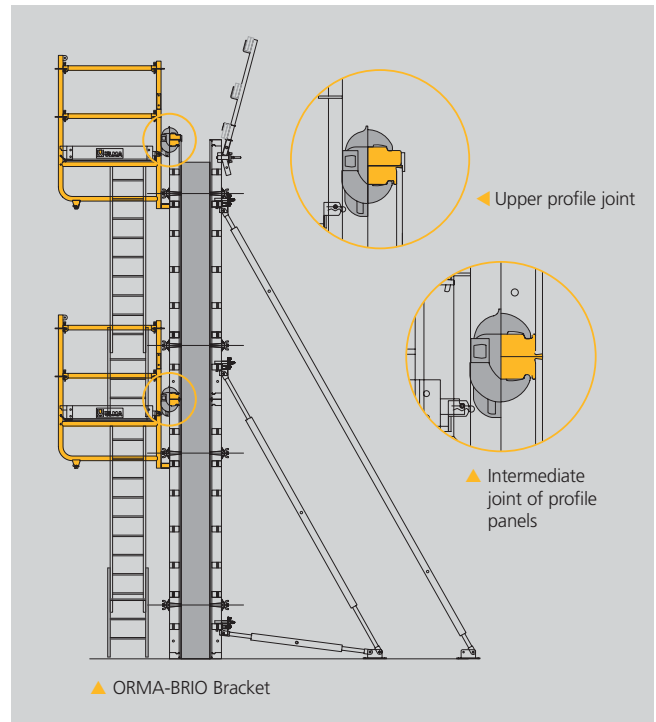

■ ORMA Platform 2,4x1,2


The integral and fast solution

This working platform, which includes all the necessary **elements**, is **always** placed on the upper part of the formwork panels.



To install the platform, just unfold the handrail and lift it with a crane using the lifting rings. The final step of this simple assembly is to use the hooks to place the platform on top of the last panel's profile.

Transporting and storing the platform is simple since the handrails fold up on top of it, which makes it easier to stack.

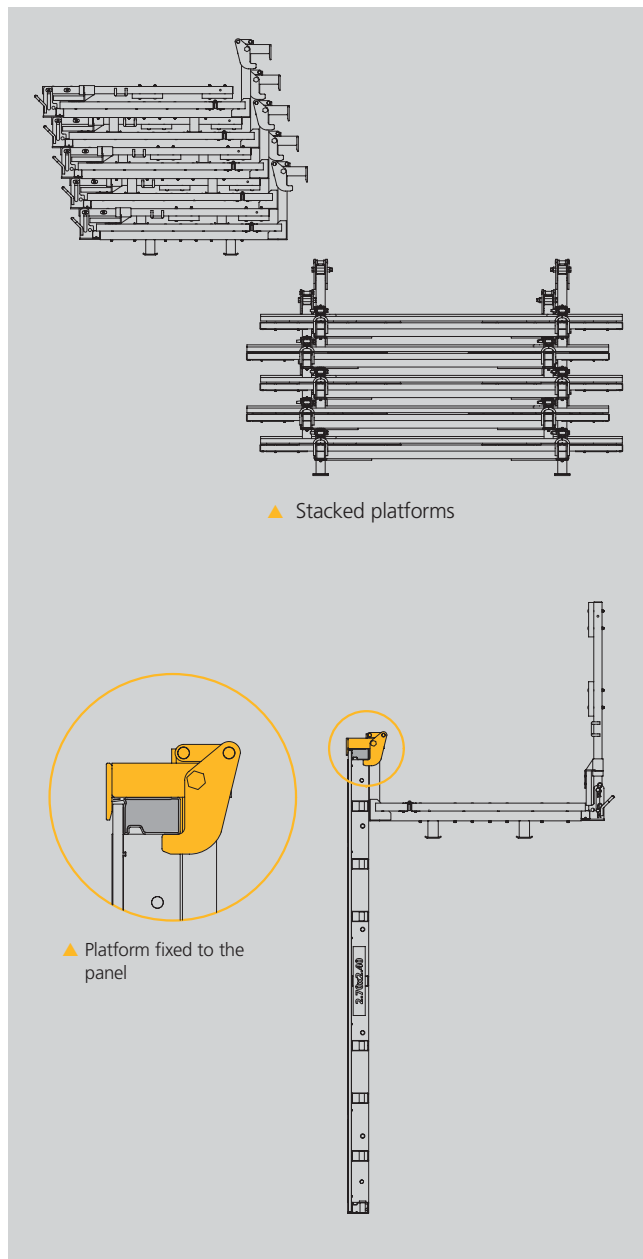

■ Stabilizing System:


Constant balance


Elements used during panel assembly to stabilize them against wind loads and to plumb the formwork once it is assembled. The system uses adjustable jacks to support both tensile and compression stresses.



It is comprised of the following:



- **Push-pull prop:** a tube over which two jacks slide to acquire the proper length. More than one type of push-pull prop may be used to stabilize the formwork based on the height of the formwork. Push-pull props range in length from 1.1 to 10 m.
- **Head 60:** an element that joins the panel and the Push-pull prop. It can be placed over both the vertical and horizontal ribs.
- **Push-pull prop shoe:** component used to anchor push-pull props to the foundation through the holes includes on it. It's recommended to use HSA M20X125 Hilti anchors.

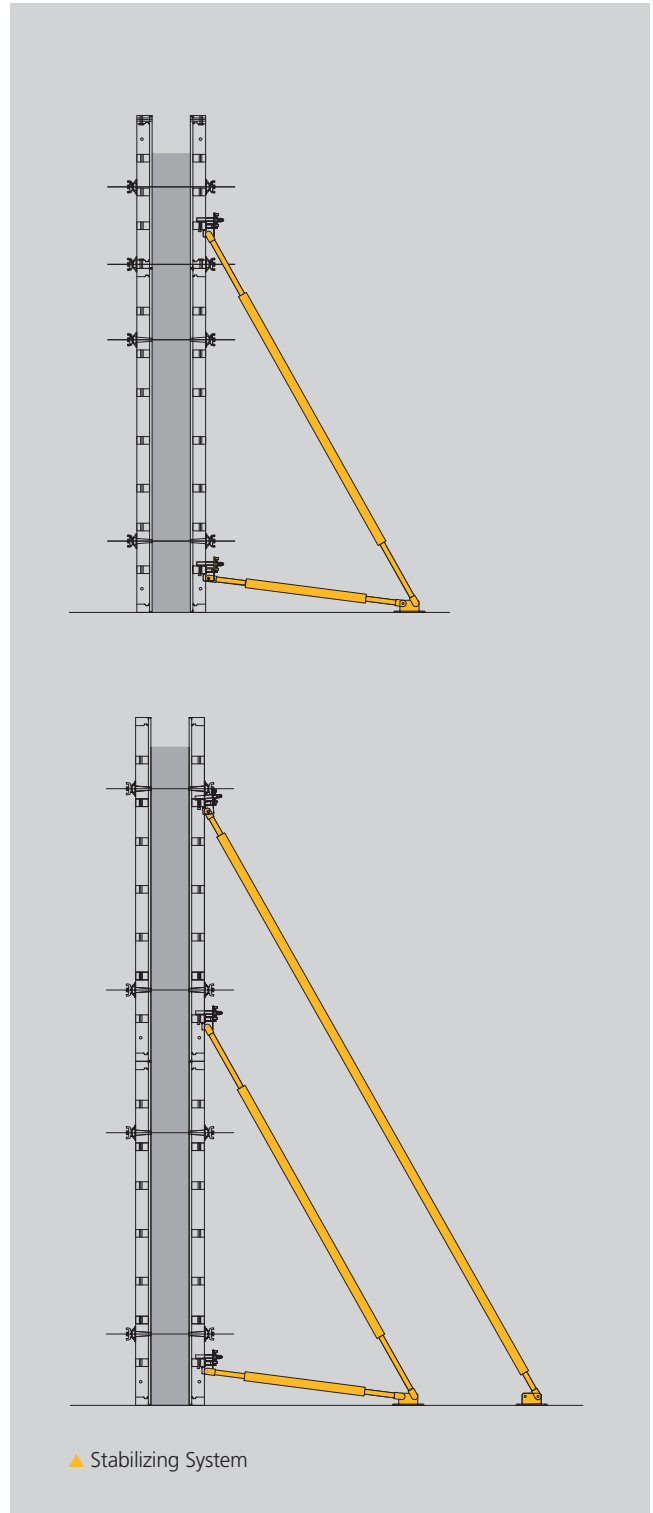

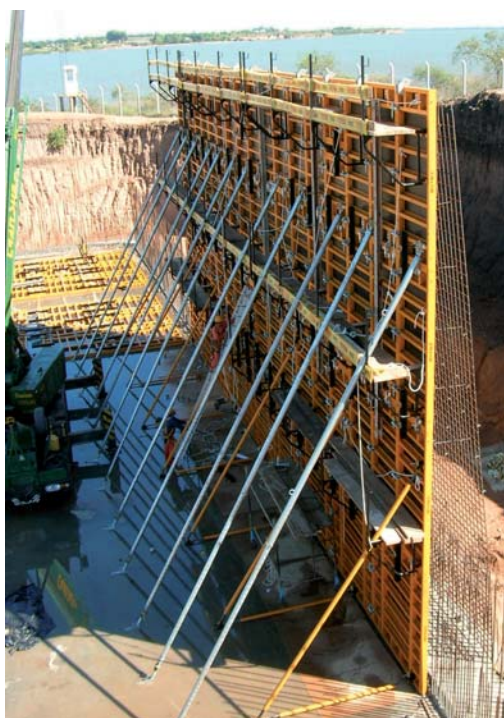


► Basic assembly process


The work process described below may vary depending on the geometry required. Work at high elevations should be executed safely from working platforms or using reglamentary auxiliary equipment that guarantees the operator's safety.

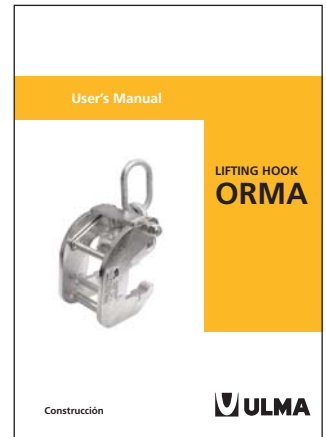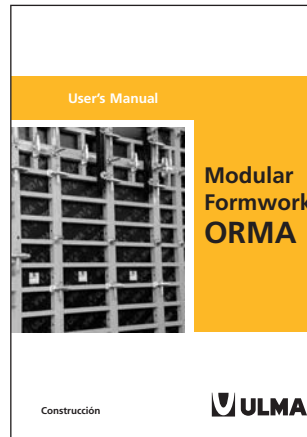


▲ For further information, read the ORMA Modular Formwork User's Manual and the ORMA Lifting Hook User's Manual.

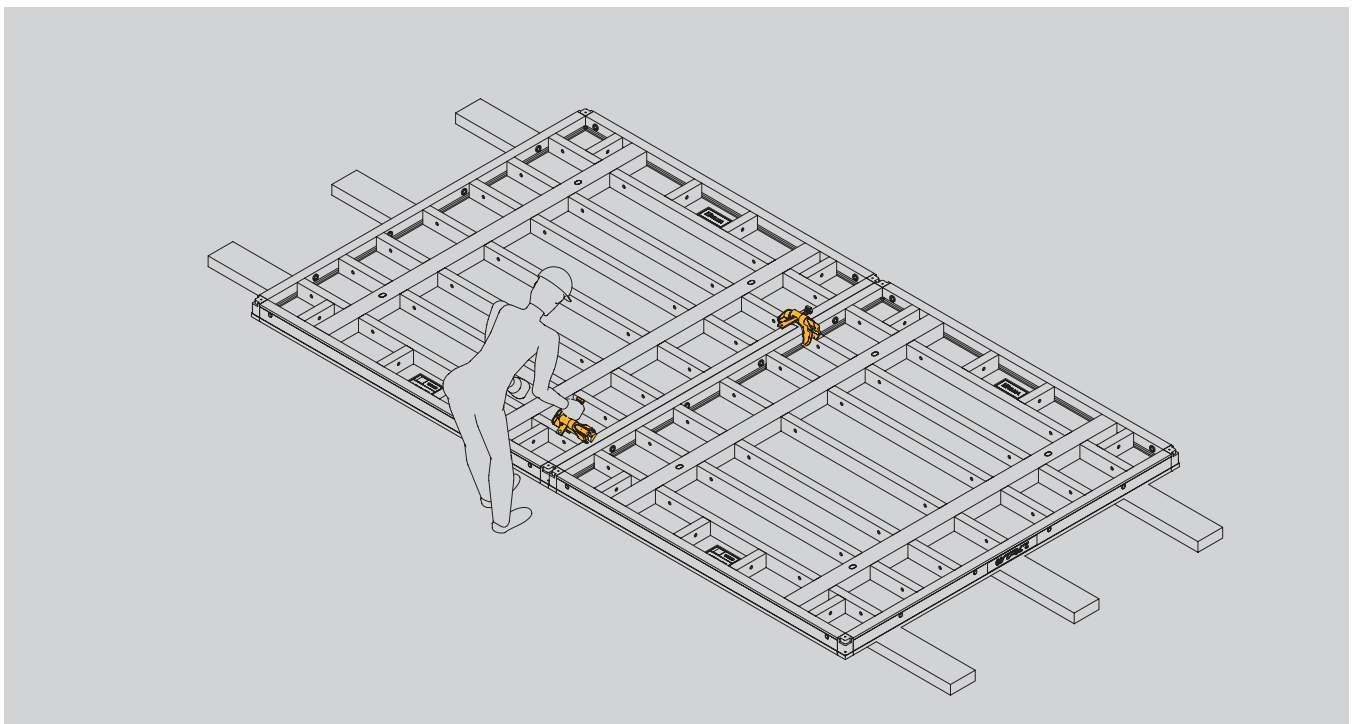


- ▲ · Place the formwork Panels on top of the wood sills with the metal frame facing upward.
- Join the panels with two Adjustable Clamps on the vertical joint.

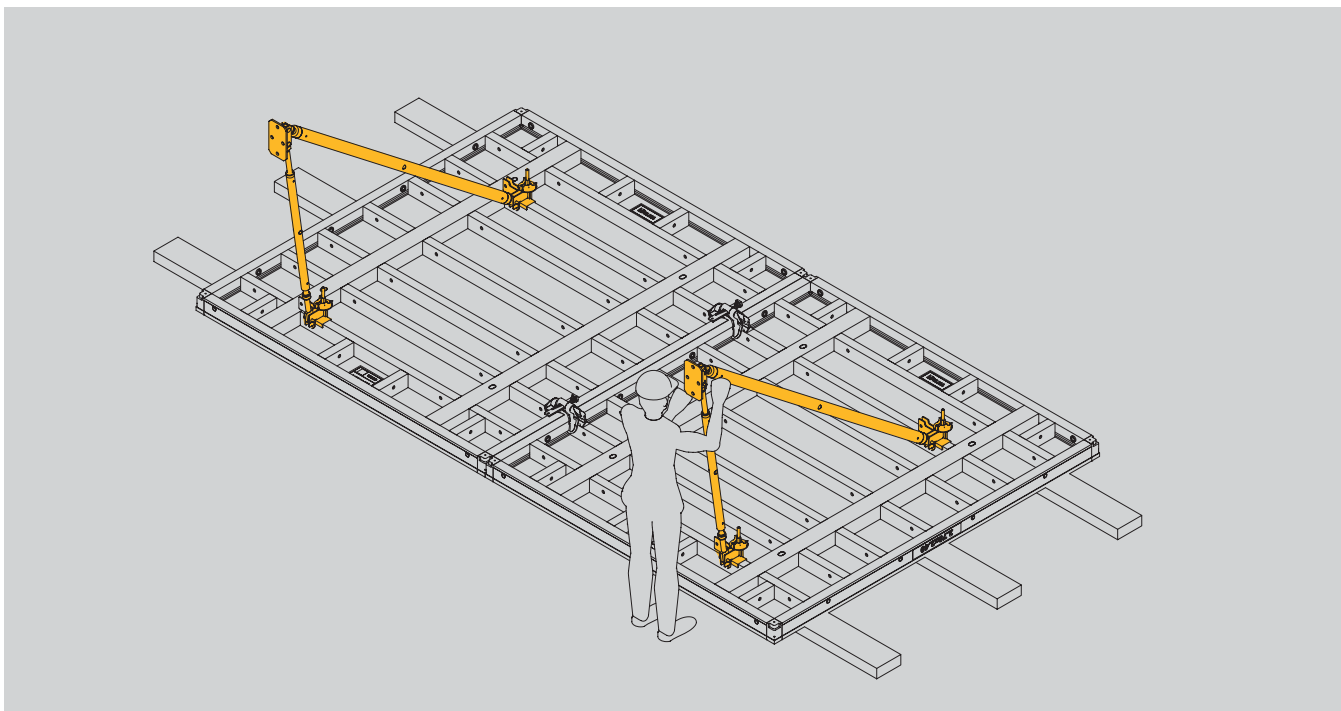


2 · Assemble the stabilizing equipment with Push-pull Props, Heads and Push-pull Prop Shoes.

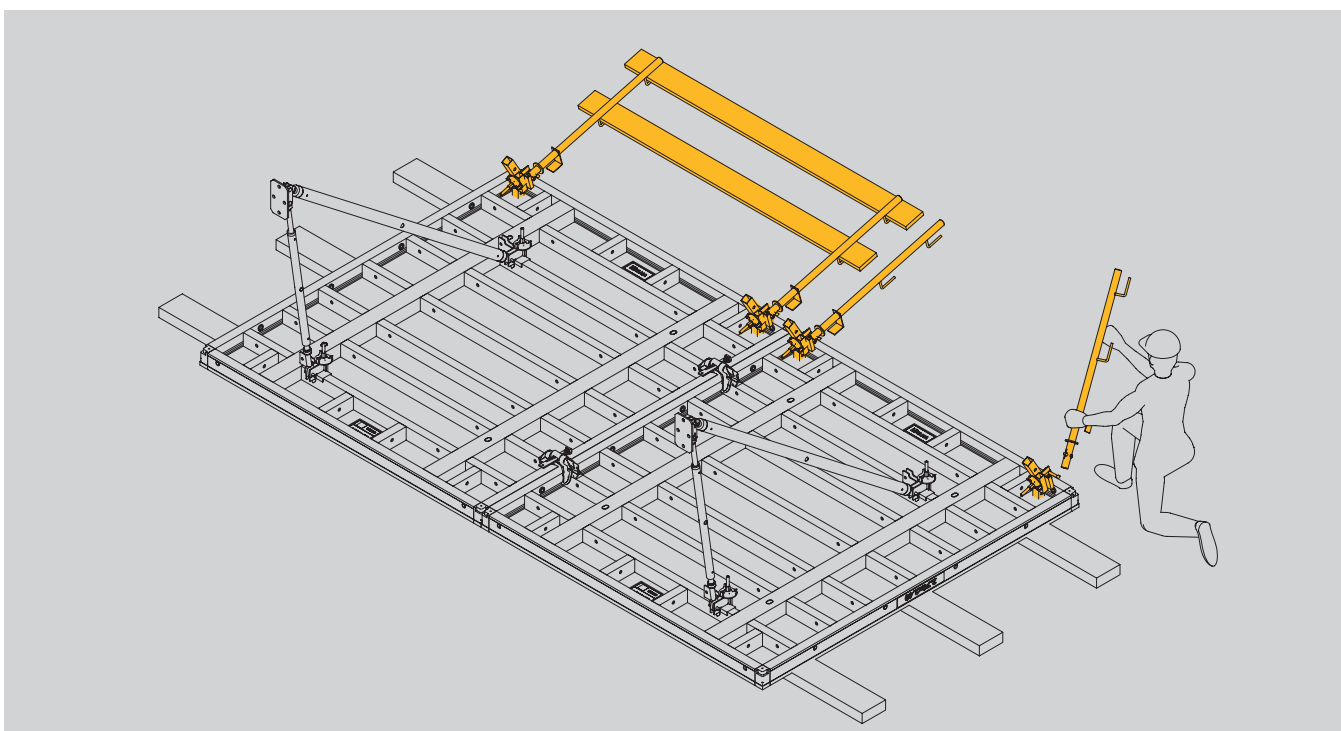


3 · Install the Handrails over the Panels using the Post Bracket, Safety Handrail Post and the planks or tubes.

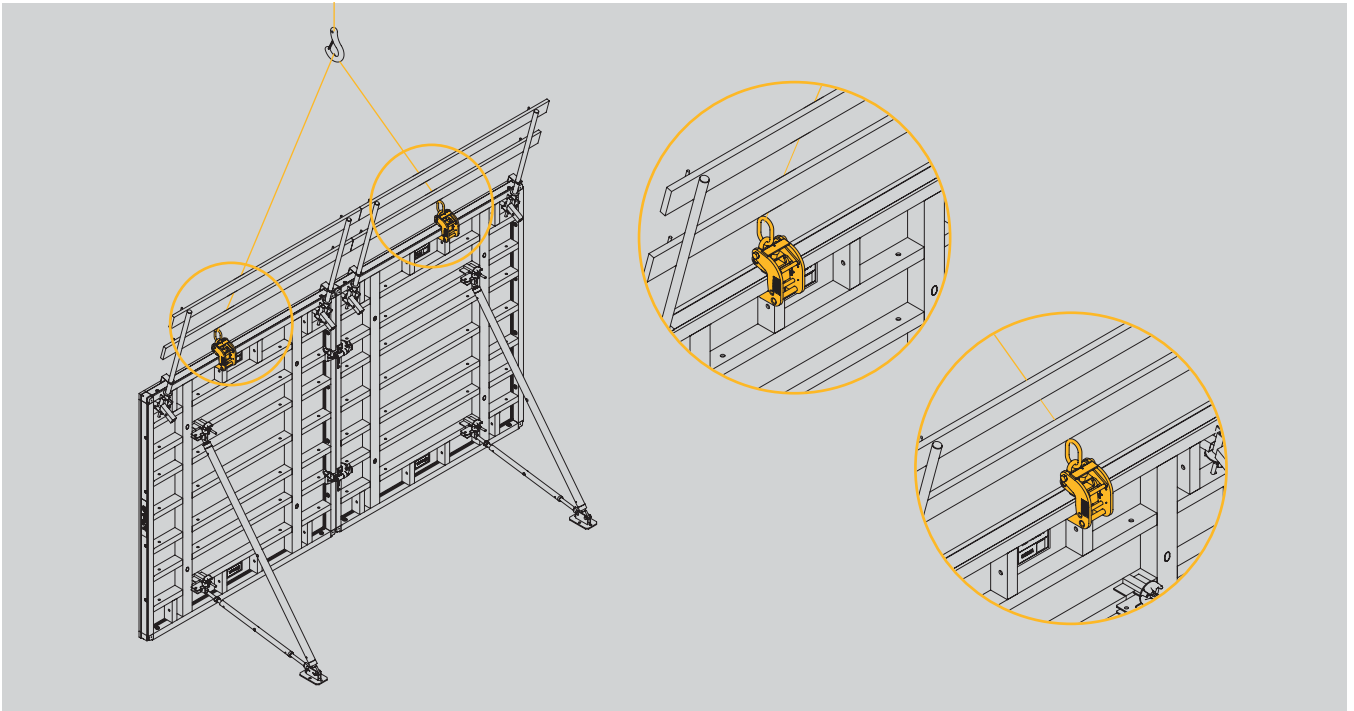


- 4 · Install the Lifting Hooks.
- Lift to the desired final position.
 - Anchor to the ground.

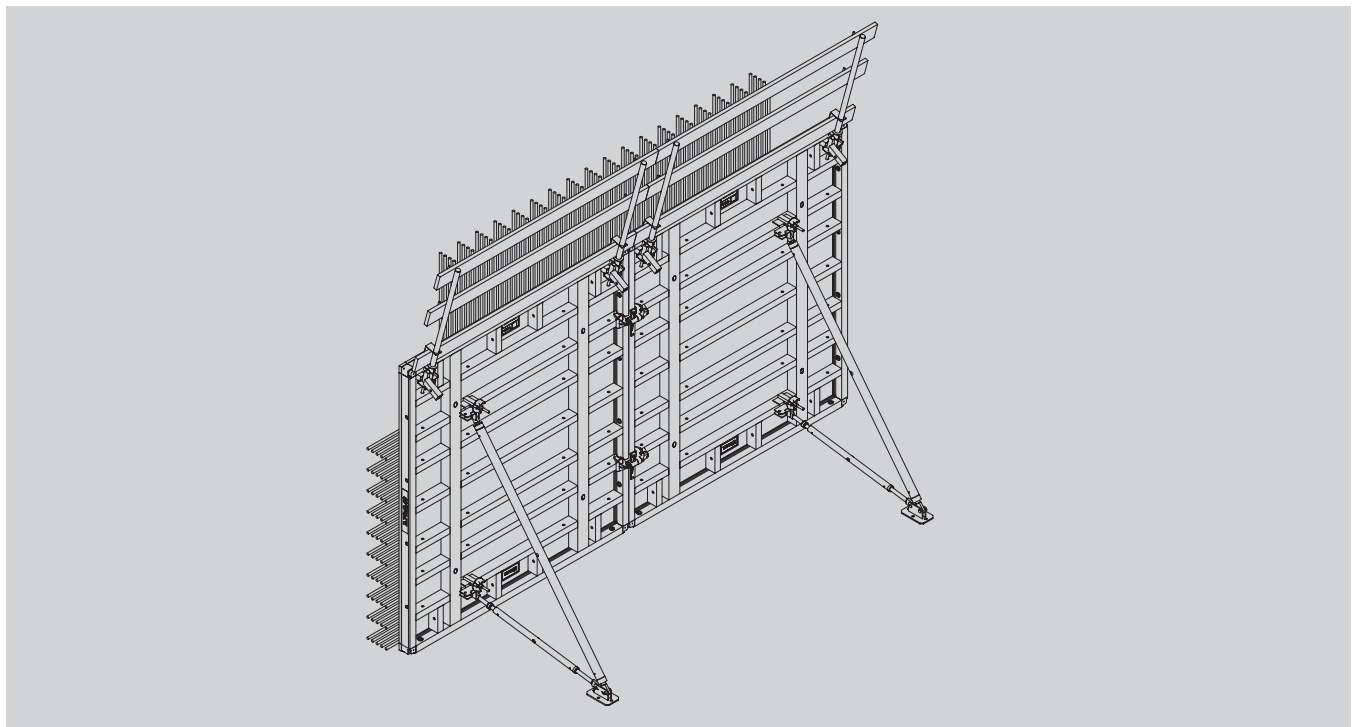


- 5 · Reinforce.

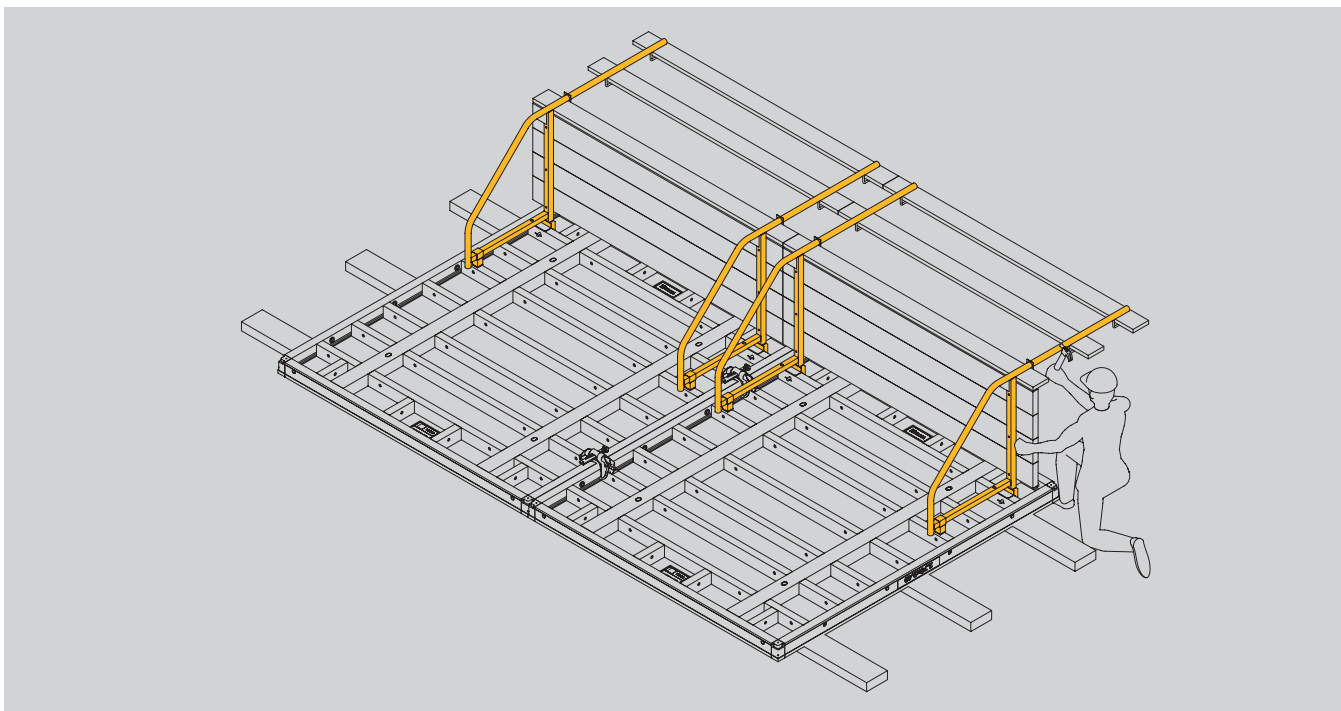

- 6 · Repeat the gang assembly process on the opposite side, building the working Platform using Walkways Brackets, handrails and planks.

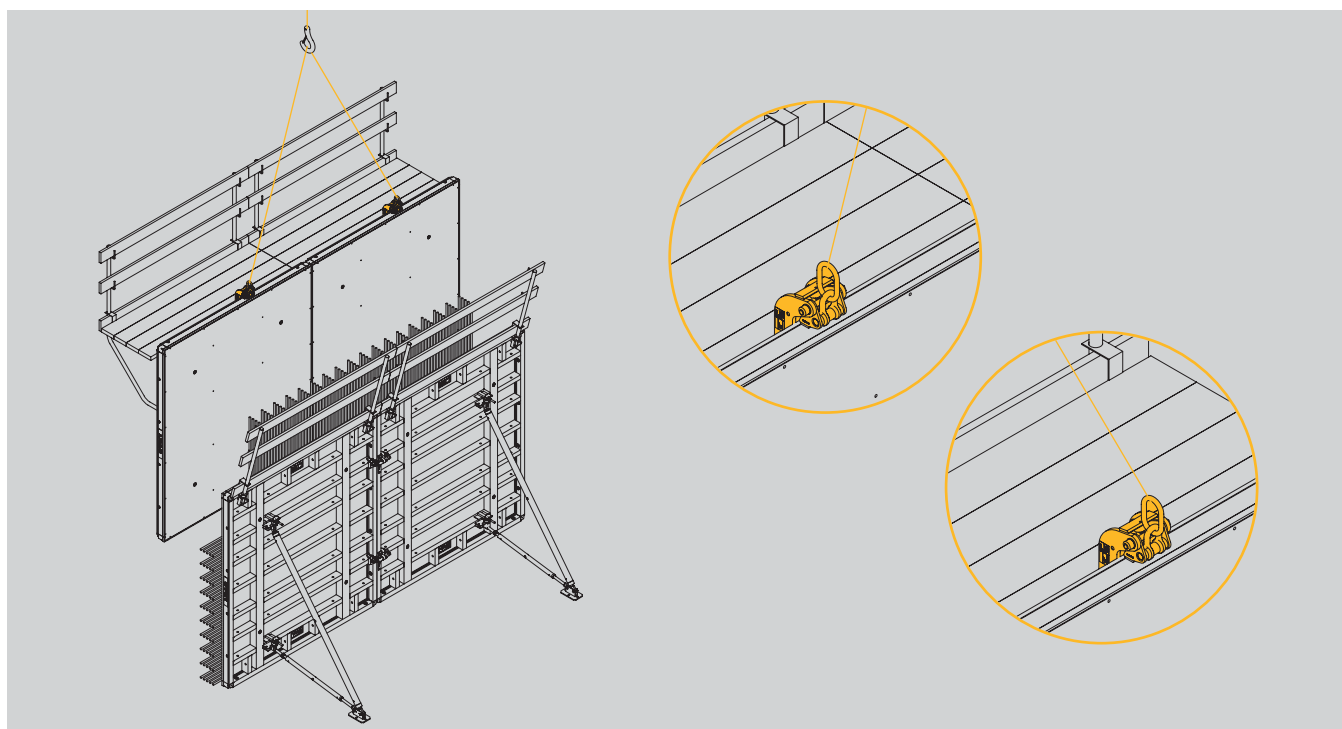

- 7 · Lift the gang by the Lifting Hooks and position it face to face to the push-pull prop gang.

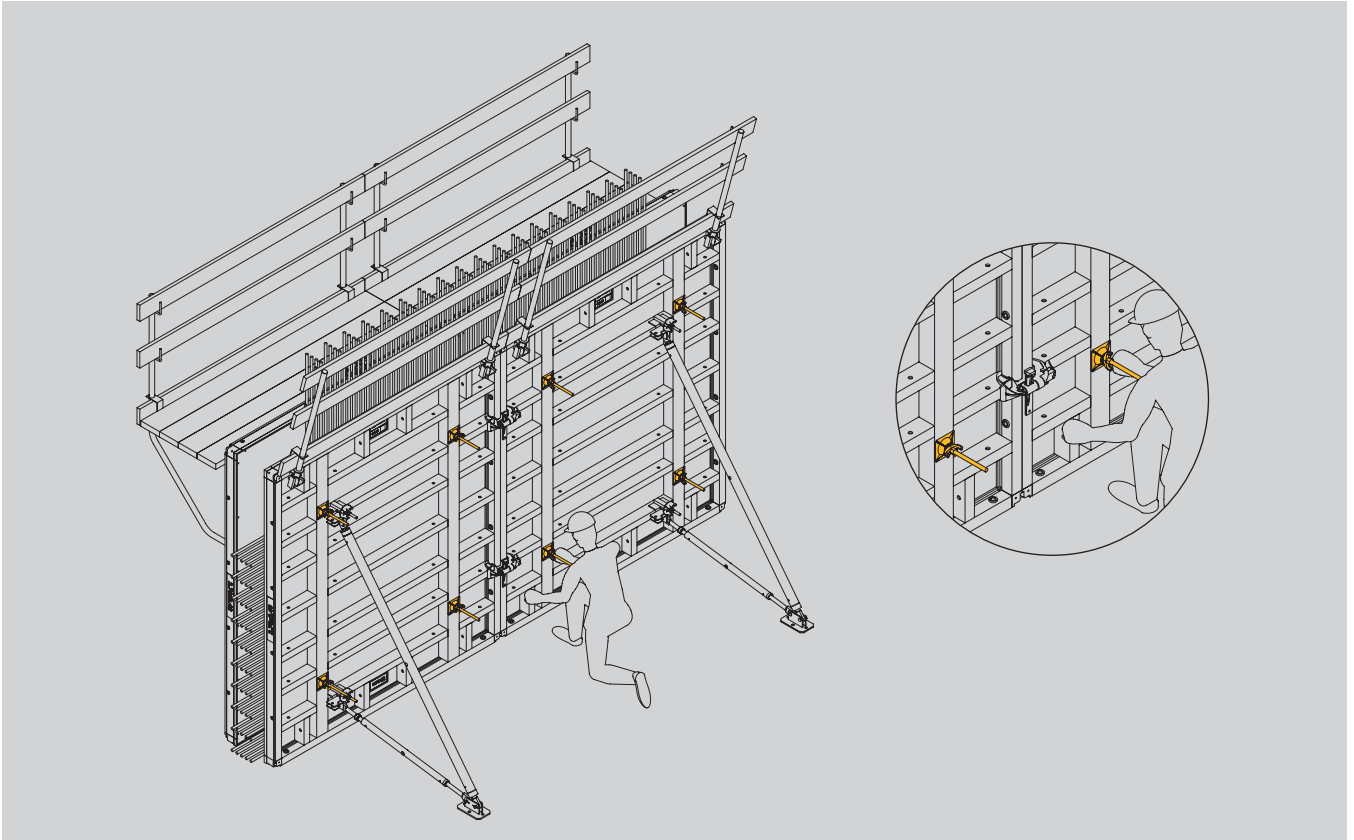

- 8 · Insert the Tie Rods and fix them using the Plate Washer Nuts.
 · Install the lateral Handrails.
 · Concrete can be poured after the bulkheads have been installed.



► Technical Solutions

All wall geometries imaginable can be made with this system

■ grafsystem:


Application software

This software was developed by ULMA Construcción, and it facilitates the design of all construction site solutions that can possibly be solved with any product in the portfolio. **grafsystem obtains, quickly and easily, the assembly drawings and a detailed budget of the materials required for each project.**




With the project drawings, ULMA Construcción Technical Department can solve every problem imaginable for any construction job, when building vertical or horizontal structures.


In short, by simply entering the desired structure geometry, this software provides the best solution for any case.

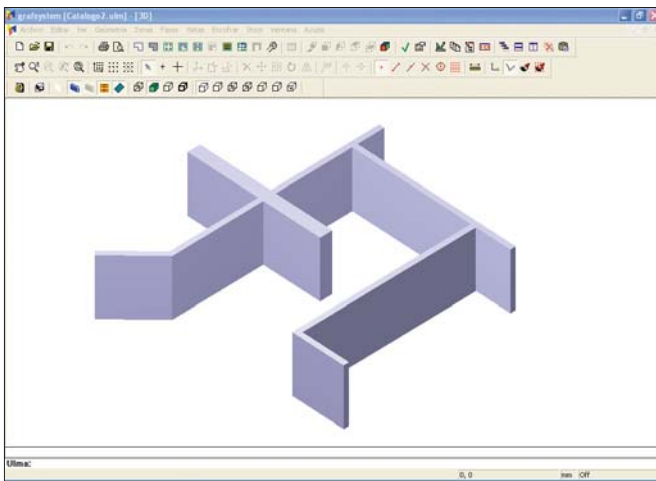

▲ Jobsite geometry

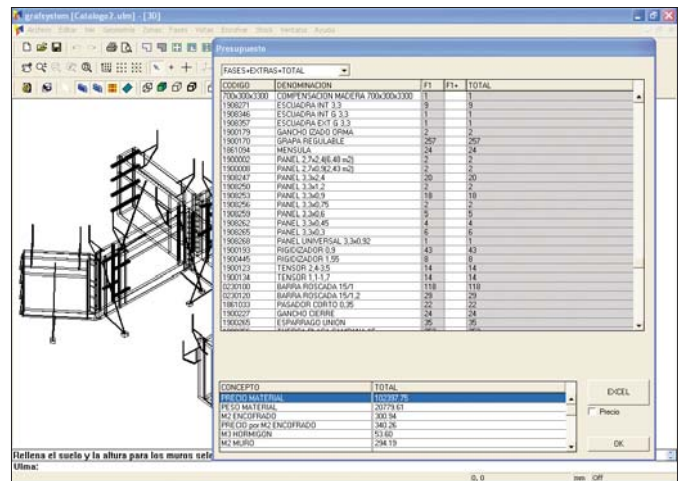

▲ List of materials - budget

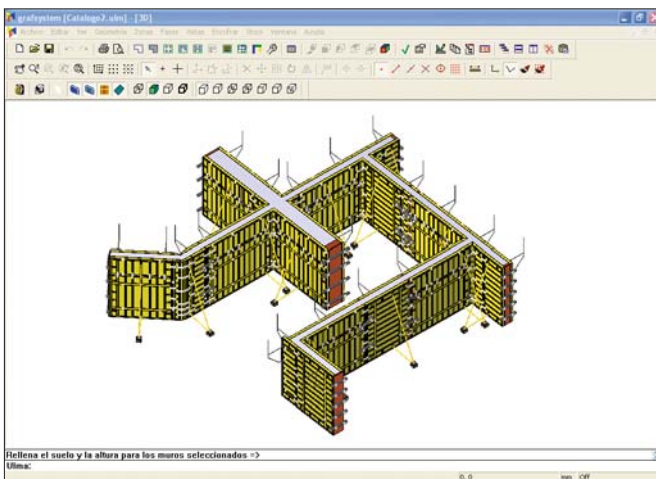

▲ Solution - 3D framed wall



▲ The ORMA Modular Formwork system is capable of providing solutions for different geometries encountered when erecting vertical structures.



90° Corners

The inside face of 90° corners is framed using the **Inside Corner**.

These corners provide a solution for wall thicknesses between 15 cm and 60 cm, with a standard deviation of 5 cm. They also provide solutions for all wall dimensions, whether without compensation or with maximum compensation thickness of only 5 cm using Plate Nut Washers so Walers are not required.


• There are various solutions used to frame the outside face of 90° wall corners:

- Outside Corner
- Panel in the edge
- Column Panel

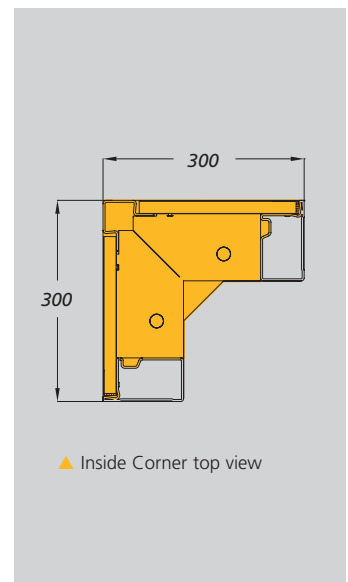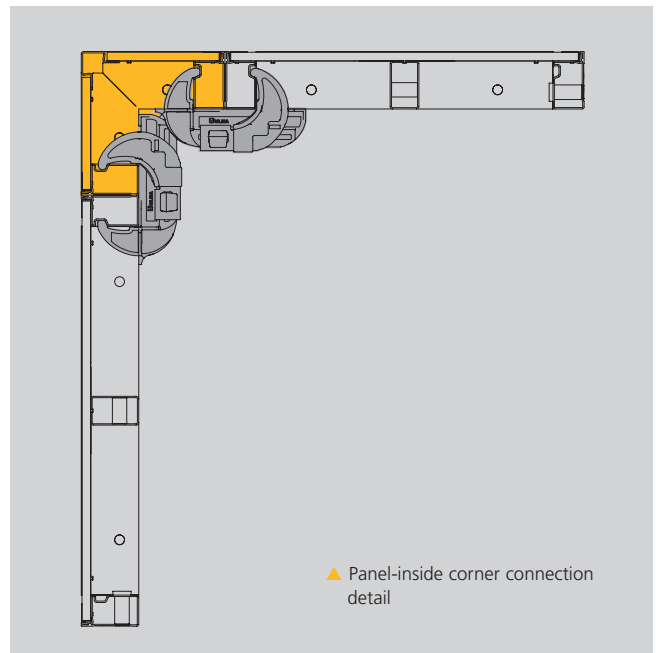



► With Outside Corner

The outside face of 90° corners is framed with the **Outside Corner**, joining it to the adjacent Panels with Clamps in both directions.

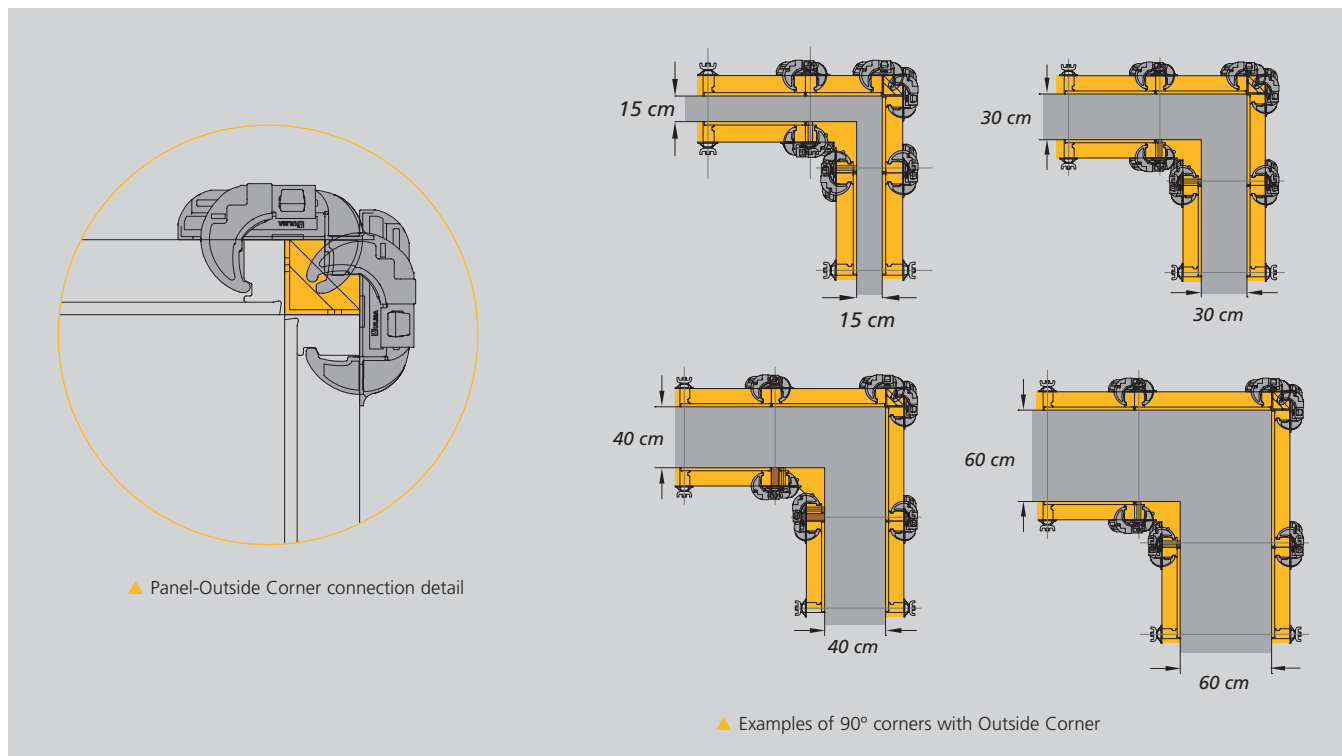

Panel in the edge


This solution consists of placing one panel perpendicular to another exactly in the edge, joining them with Adjustable Clamps.

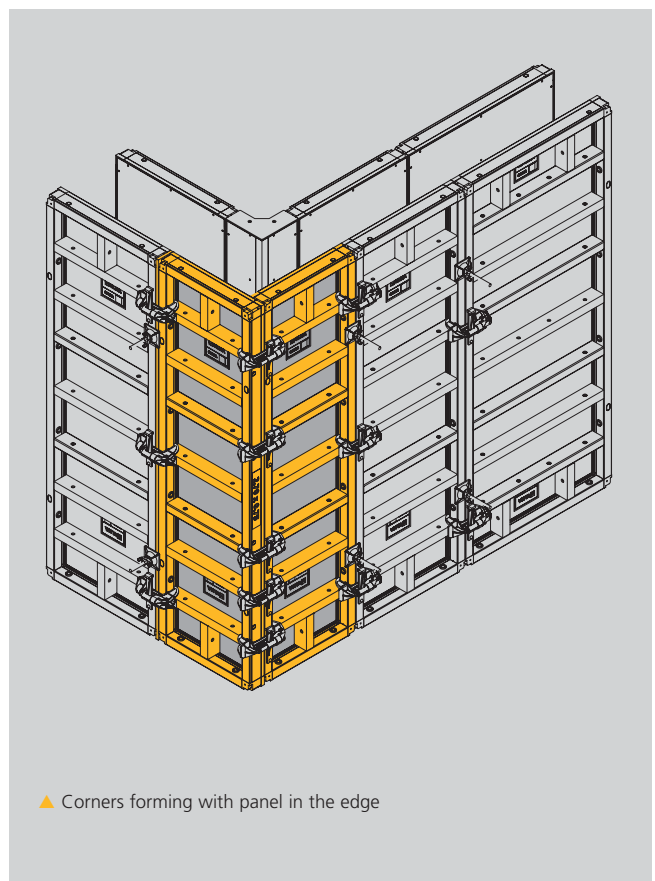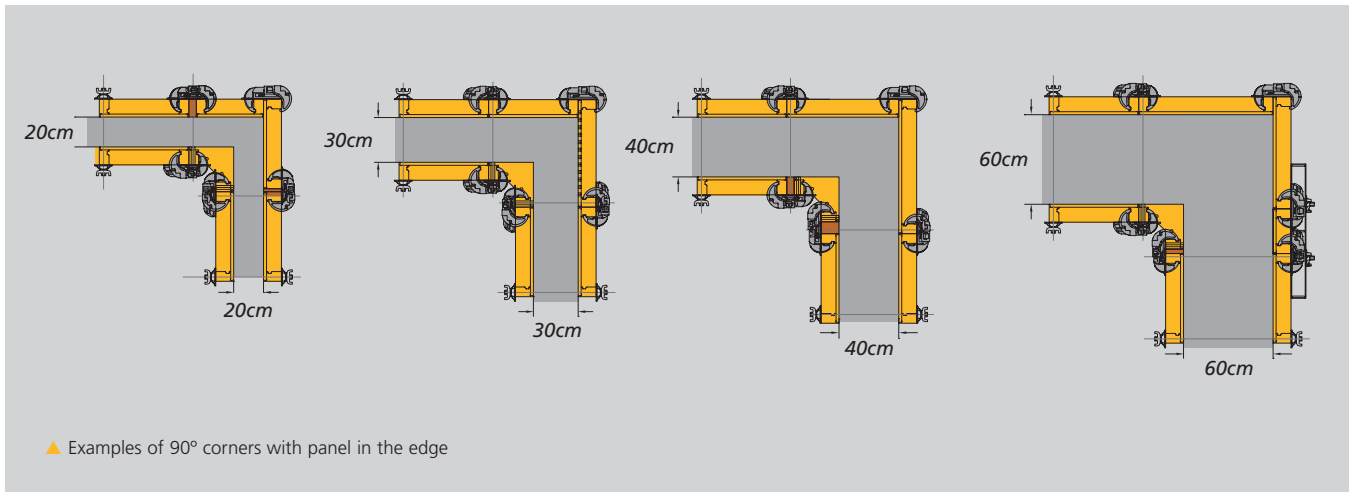


With Column Panel

Combining two Column Panels facilitates **obtaining the desired thicknesses in every case**. It also reduces the need to use compensation.


Both the lateral holes of the wall panels and the holes of the Universal Panel's multipunched ribs provide a wide range wall dimensions in increments that are multiples of 5 cm.

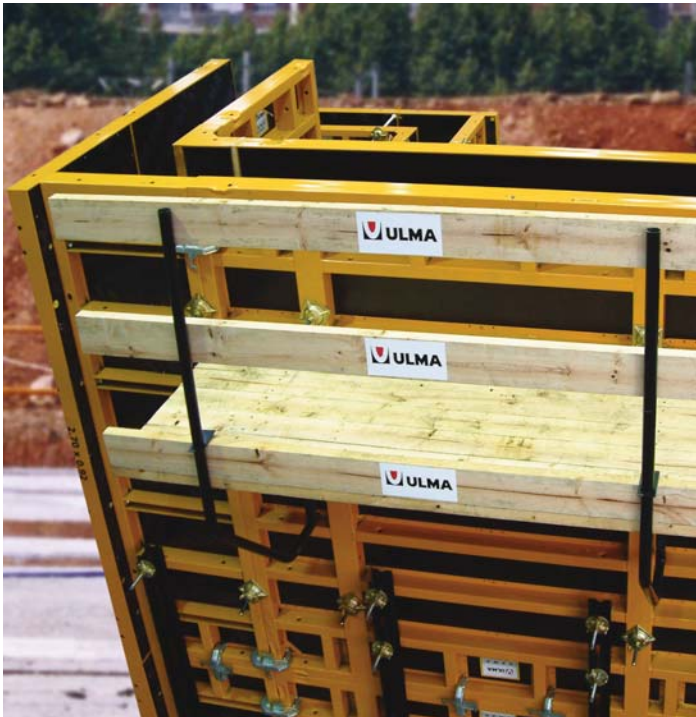


▲ The joint is tied using the **Universal Panel Bolt and Plate Washer Nut 15**.

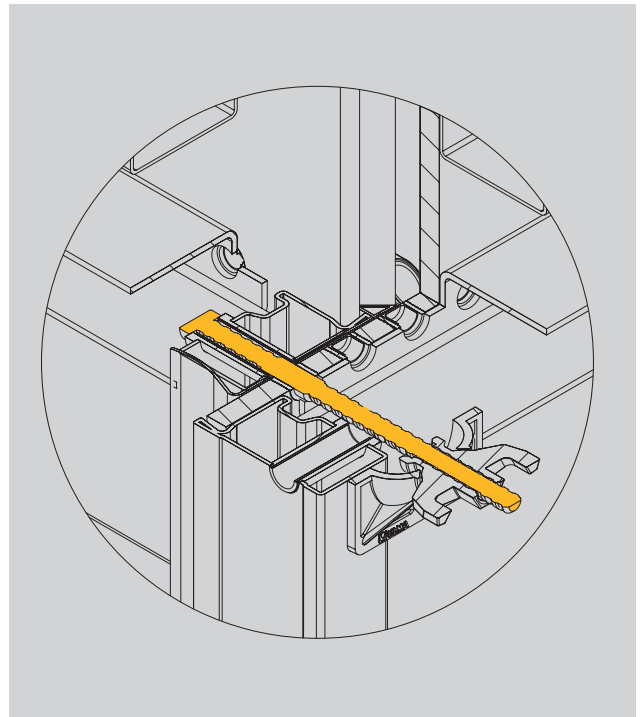

▲ Column Panel-Column Panel joint

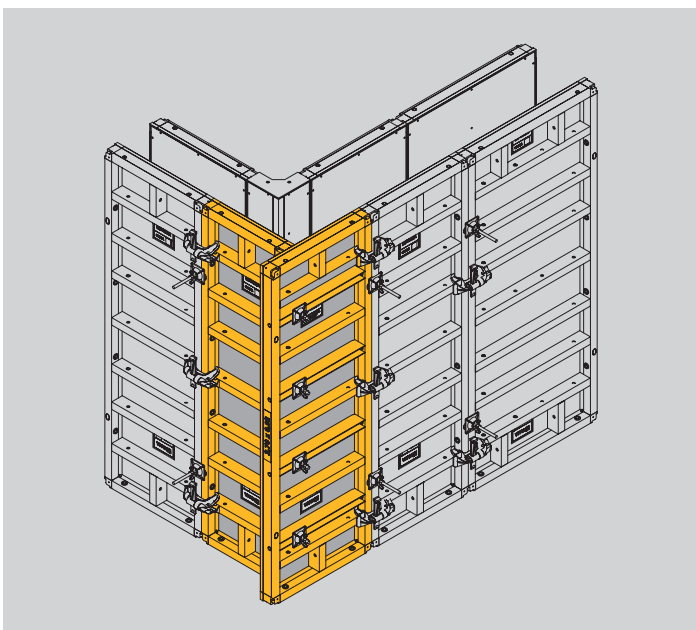

▲ Corners with Column Panel

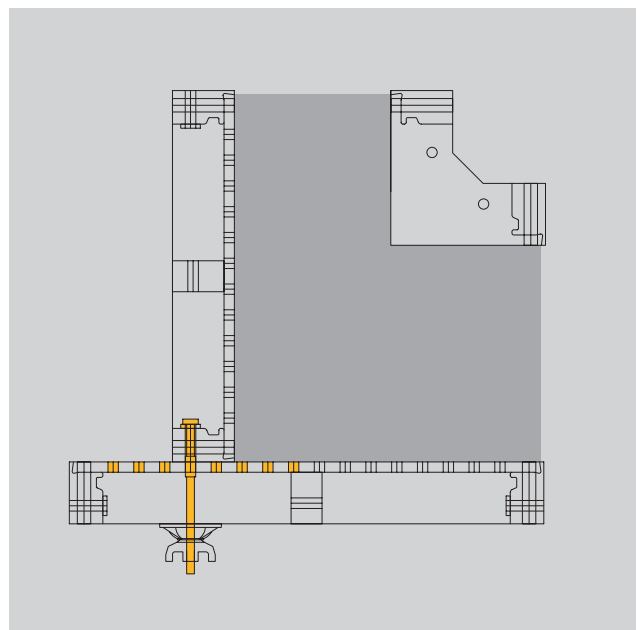

▲ Column Panel joint

■ Hinged corners

Vertical formwork systems come with different elements that allow them to be adapted to any type of angle, whether 90° or an angle other than 90°.

To do this, combine outside and inside **Hinged Corners** with panels that are joined laterally with clamps.



The range of angles covered is from 65° to 180°.




► Between 65° and 180°:

Combine Outside and Inside Corners.

To obtain the minimum angle of 65°, join the panels and the Inside Hinged Corner with the **Fixed Clamp**.

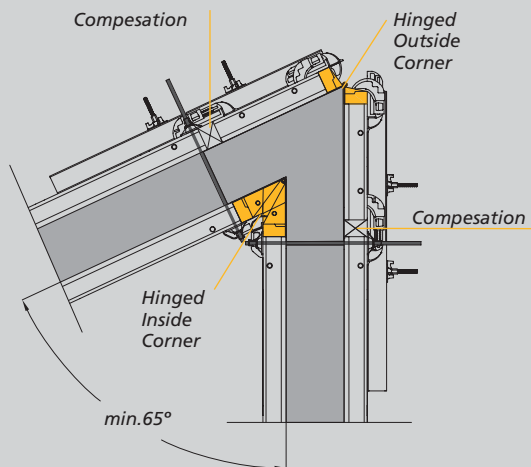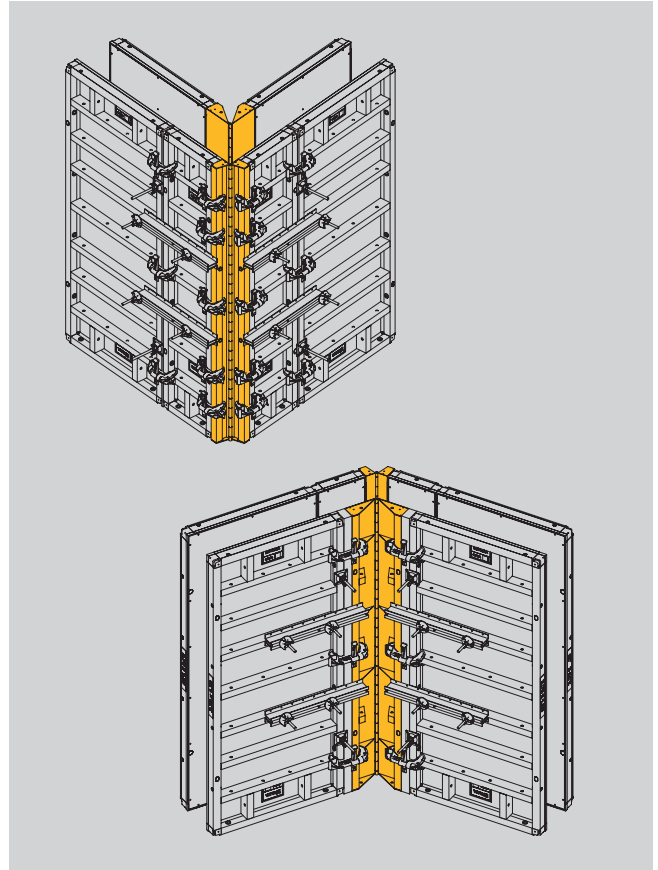


▲ Minimum angle with **Hinged Corners**

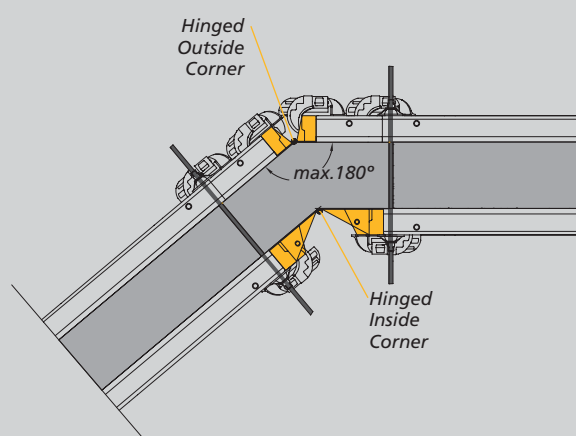


▲ Maximum angle with **Hinged Corners**

Between 95° and 180°:

Use the Inside Corner on the inside and outside face.

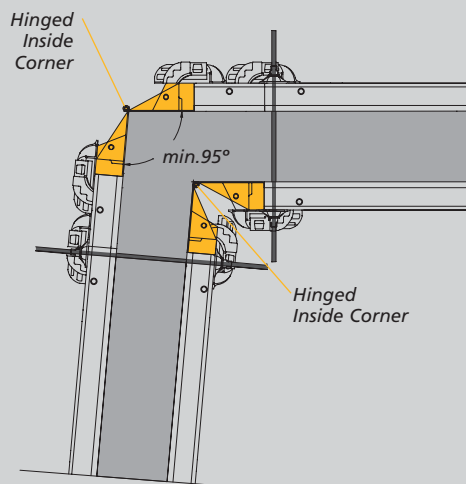

▲ Minimum angle with Hinged Inside Corner

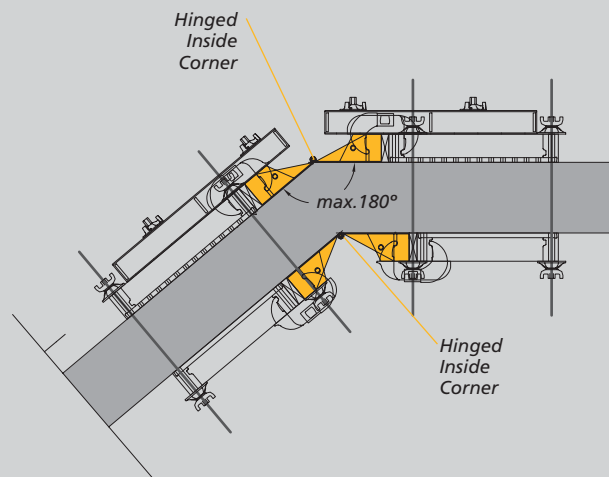


▲ Maximum angle with Hinged Inside Corner



90° Wall intersections

Combining the **Inside Corner** with the different panel widths, it can be solved various wall thicknesses; thus it is possible to greatly reduce the use of compensations.

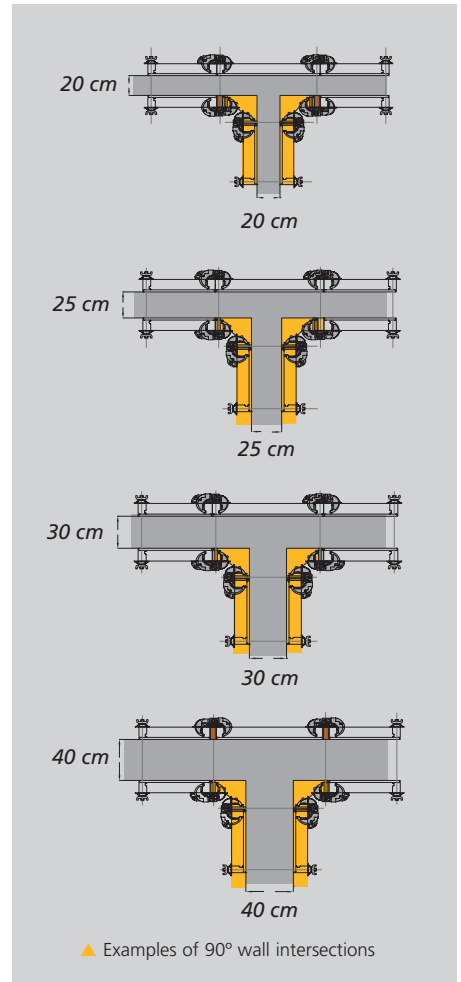


■ Bulkheads

▣ With Waler


The bulkheads are solved with Walers fixing them to the panel's profile using Bulkhead Hooks. The bulkhead plywood is nailed and supported on the Walers.



▲ Fixing the Waler to the Panel using Bulkhead Hooks tied to the profile

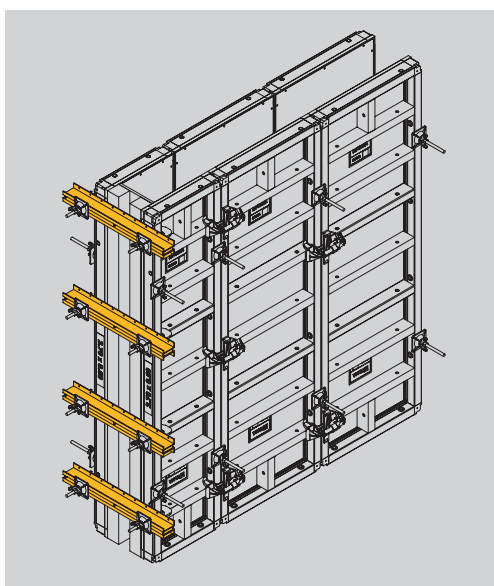

▲ Bulkheads with Waler

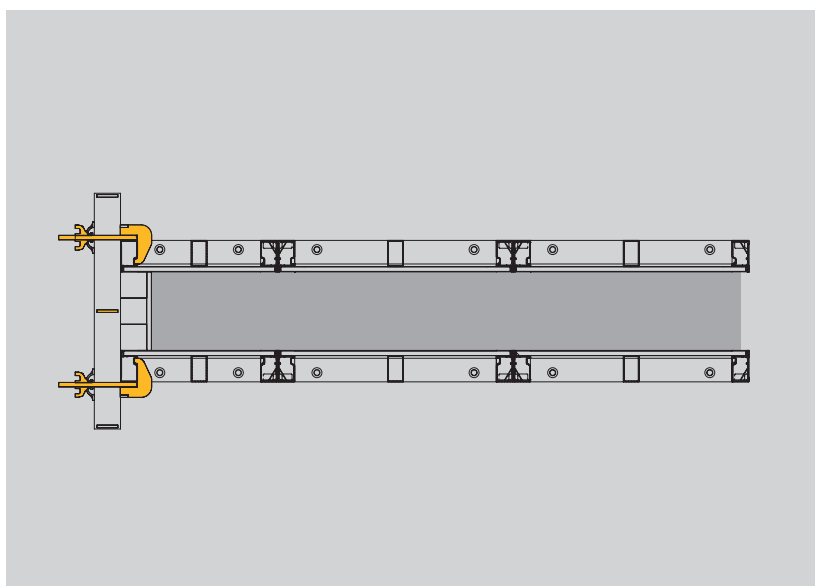

▲ Fixing the Waler to the Panel using Bulkhead Hooks

Other types of bulkheads:

✦ With Panel in the edge



✦ With Outside Corner




✦ Pilaster with Walers




Columns

The Column Panel characteristics and different combinations of these panels provide the desired column dimensions.

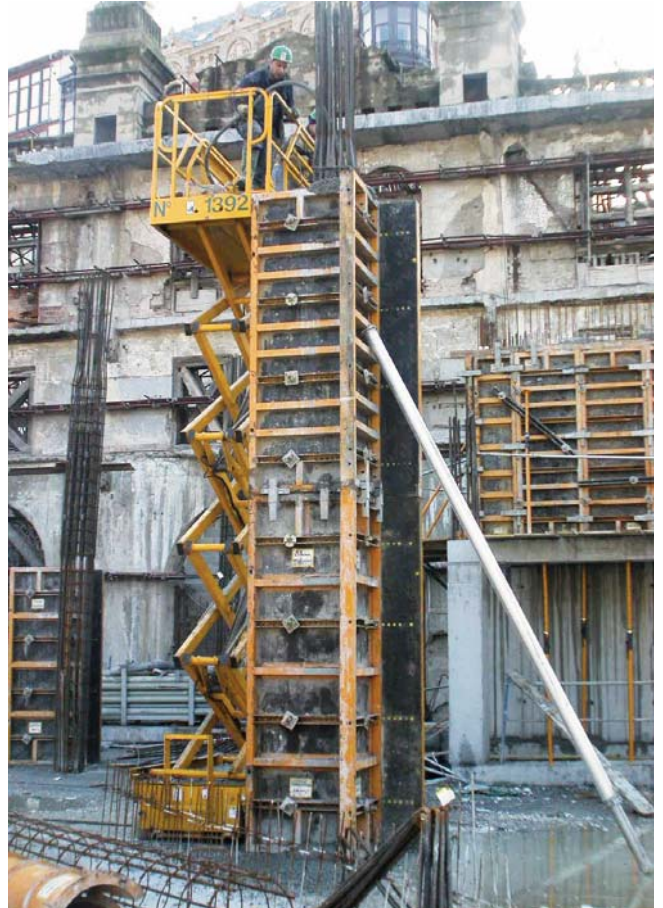

- There is a wide range of **Columns Panel** that provides solutions for the following geometries: columns from 30x30 cm to 120x120 cm with the option to adjust every 5 cm.
- The range of heights for this type of panel is as follows: 2.7 m; 1.2 m; 0.6 m.
- The range of **Column Panel** widths follows: 0.72 m; 0.92 m and 1.32 m.
- These support **80kN/m²** of concrete pressure.
- Panels are joined with a **Universal Panel Bolt** and a **Plate Washer Nut 15**, using the tie holes spaced every 5 cm on the panels.
- At high columns, the panels are vertically joined using the Adjustable Clamp or Clamp and Waler.



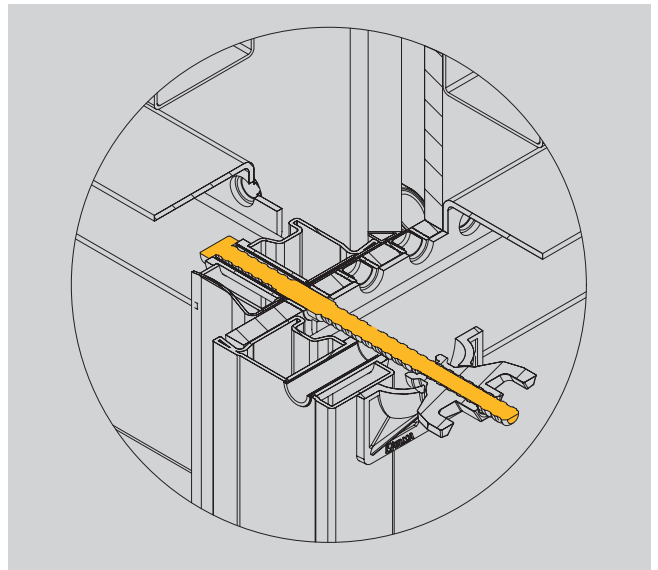



Panel columns can be joined as follows:

Universal Panel Bolt

With this component it is possible to obtain a maximum Column size of 1.15 m x 1.15 m with a standard deviation of 5 cm.




Sharp edges on the columns can be avoided by using **Chamfer strips**. This is a plastic component that is placed between two panels joined together at 90° angles; it is not necessary to nail it to the plywood because **its special shape allows it to brace the profile**. It also has slotted holes necessary to permit passing the Universal Panel Bolt through the lateral holes of the Column Panel.

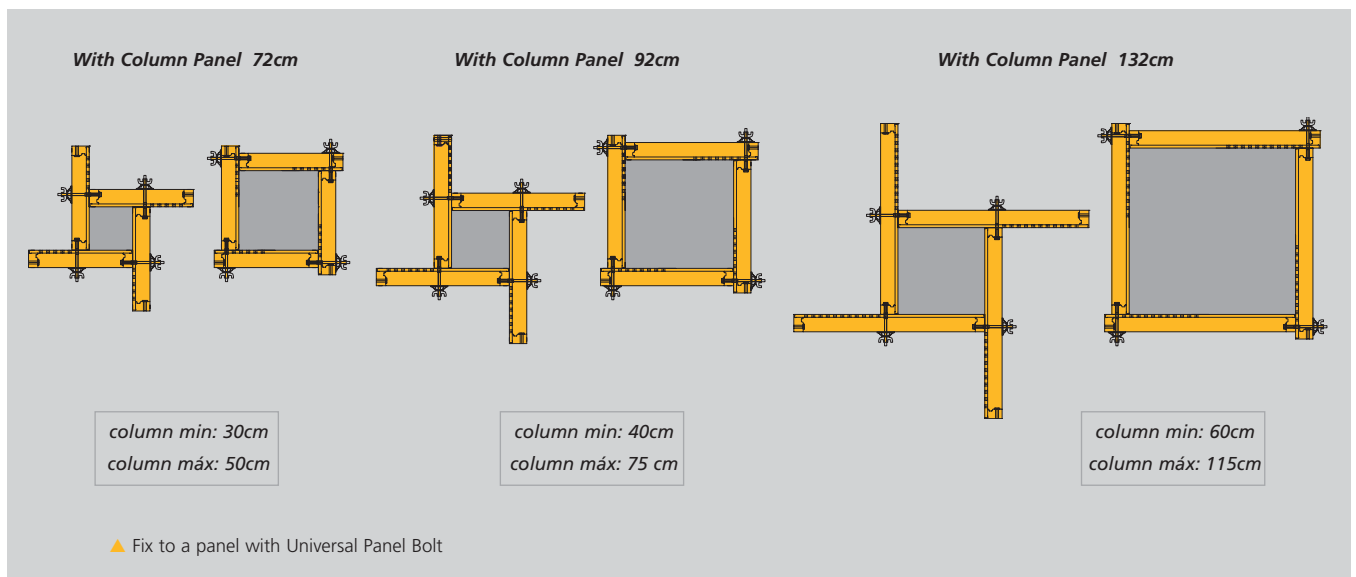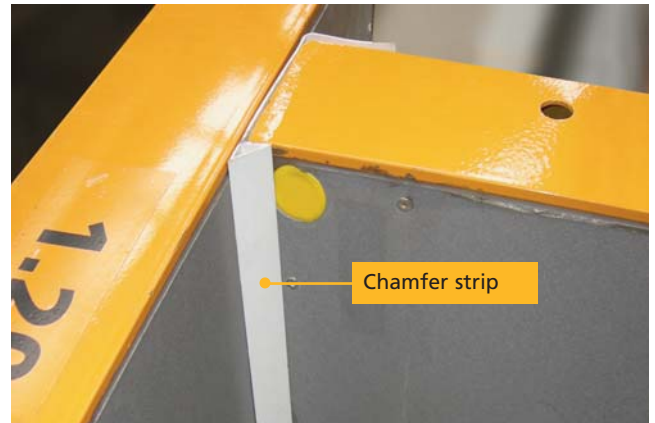

Panel in the edge

This particular solution is possible only for columns with the following dimensions: 60 cm x 60 cm; 80 cm x 80 cm and 120 cm x 120 cm. Panels are joined using the Adjustable Clamp.

- Panel in the edge solution using the Adjustable Clamp can be applied only for heights of up to 3.3 m.

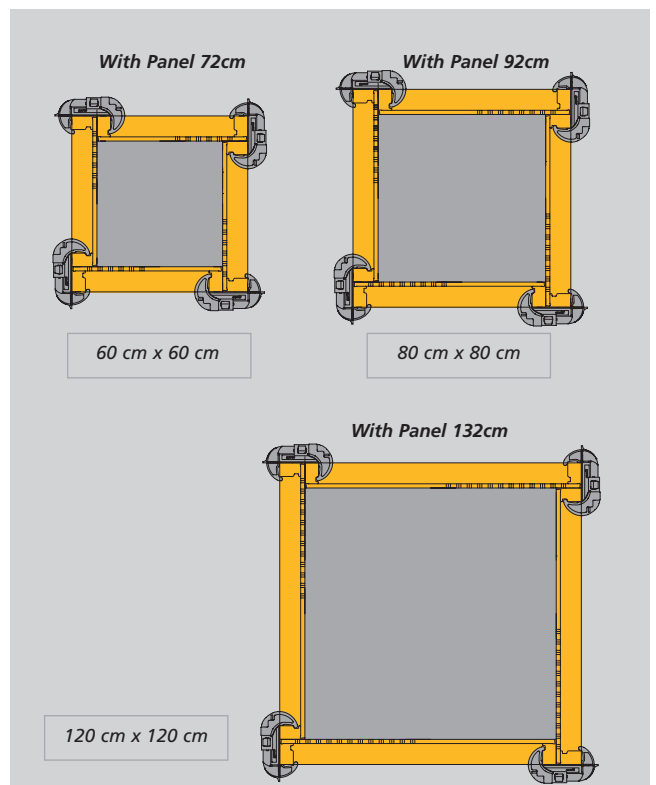

■ Filler between panels

► Fillers up to 10 cm:


Due to their size, these permit joining panels with Adjustable Clamps.

■ Tie Rods through compensation + Plate Washer Nut 15

It is also possible to use metal compensation with holes for passing Tie Rods.




▲ Wood compensation

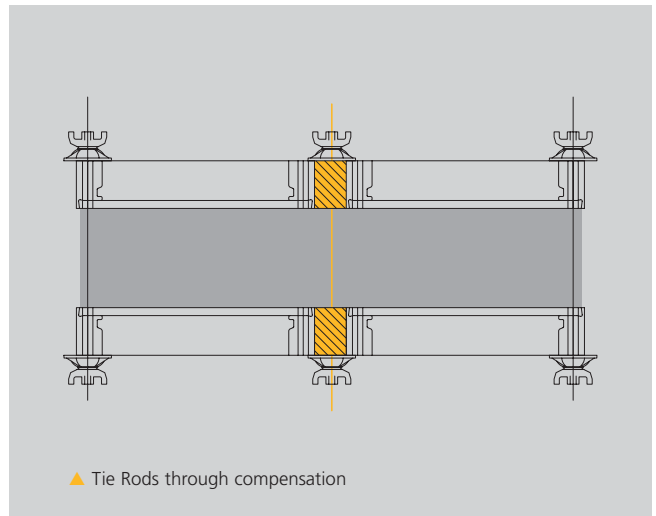


Tie Rods through the panel:


► With Waler

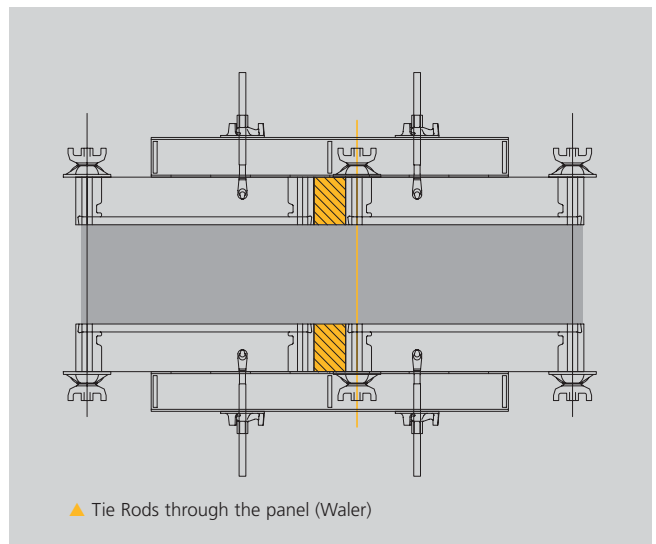


- ▶ With Plate Nut 200 x 150.
Solution valid for fillers up to 7 cm of compensation

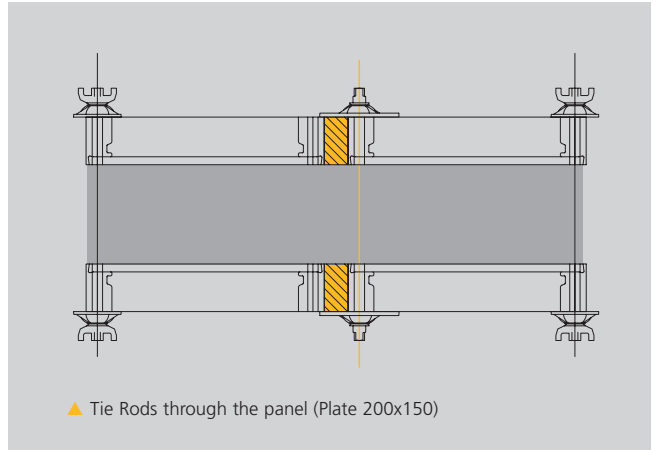

- ▶ **Filler wider than 10cm:**
Due to their size, these do not permit joining panels with Adjustable Clamps
- ▶ Compensation plate

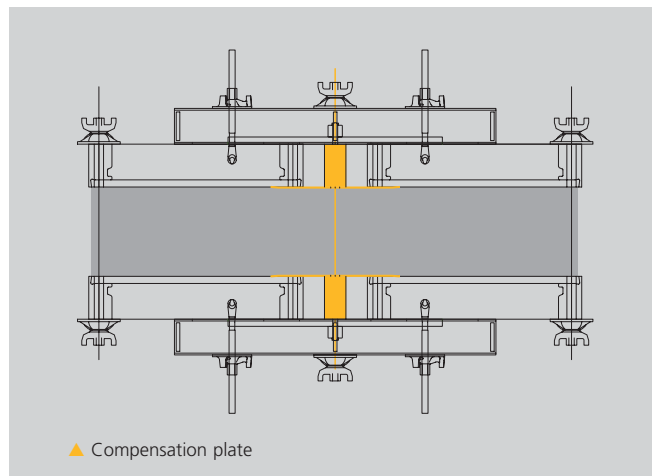

- ▶ Wooden profile

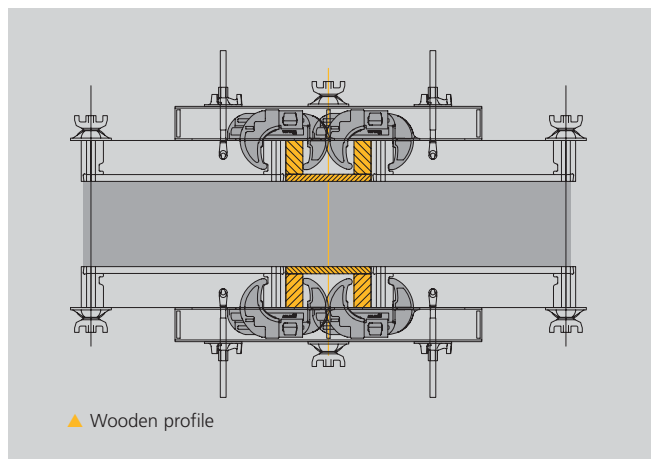


Tanks - water stop solutions

There are two ways to provide water stop solutions for walls:


Water Stop System 26

Valid for pressures up to the equivalent of a 10 m height of water.

System components:

NAME	
Water Stop Cap 26	
Spacer tube 22/26	
Plug 26	




These components are placed on Tie Rods rather than the standard tube and cone.

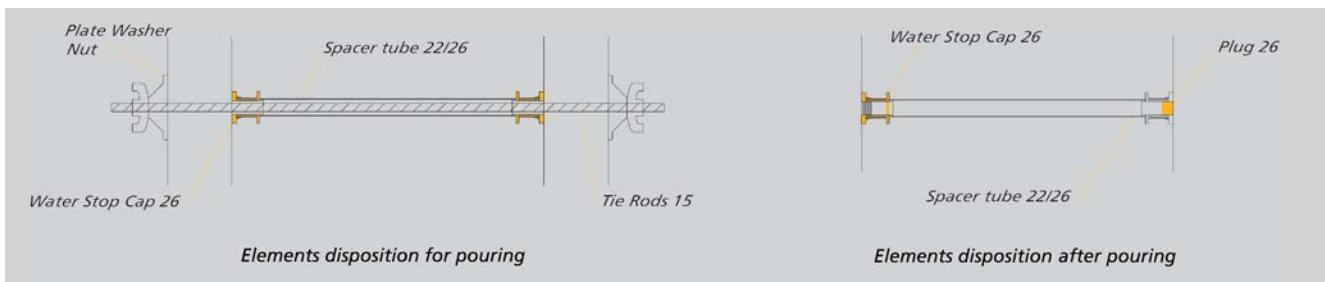


Water Stop System DW15

This component can support a hydrostatic pressure up to the equivalent of a 70 m height of water.

System components:

NAME	
Water Stop Cap DW15	
Water Stop Adaptador DW15	
Spacer tube 22/25	

In this case, the **Water Stop DW15** and the **Water Stop Adaptador DW15** are installed in the middle of the wall and are used to connect the Tie Rods and corresponding standard consumable parts on both sides.

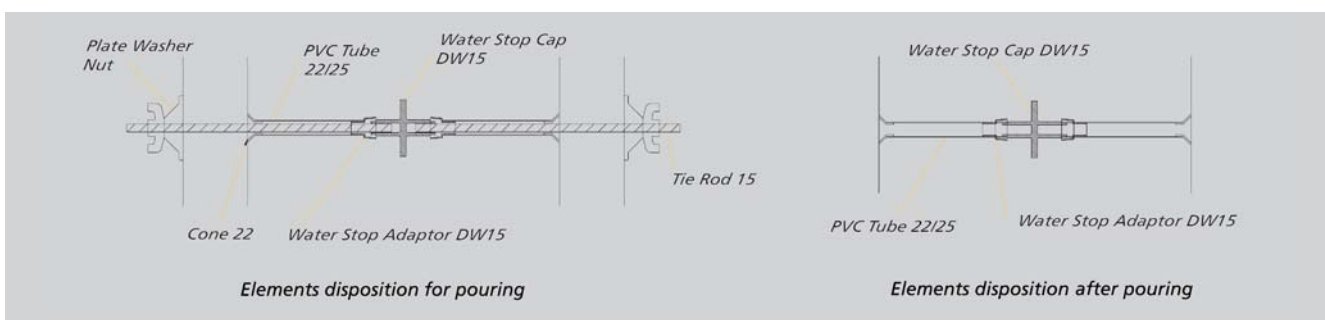

■ One face formwork

For cases in which it is not possible to place Panels face-to-face, and thus it is impossible to use Tie Rods to support the pressure of the concrete, it is necessary to use exterior structures to support said forces.

ULMA Construcción has two types of one-face formwork depending on the height of the formwork: **Walers UCAB and Trusses EUC.**

- The Walers UCAB provide solutions for walls at a maximum height of 3.6 m.
- The Trusses EUC are used for higher elevations, combining them to adjust to the required wall height.

It is quick and easy to anchor the panels to the trusses using heads. However, at the base, the trusses must be anchored to the ground by rods that were previously installed in the sills or foundation. These rods should support the concrete pressure.




▲ Walers UCAB



▲ Trusses EUC



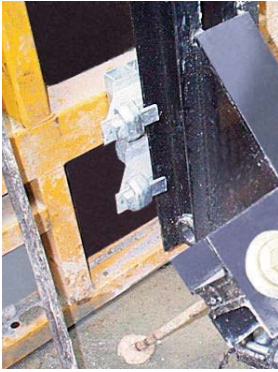


After assembly or installation, these systems, panels and trusses together, can be lifted and moved to be used in different positions or pourings.


For safety, when working at high elevations is required, working platforms can be incorporated into these systems.




► These one face formwork systems are compatible with other ULMA Construcción vertical formwork systems.

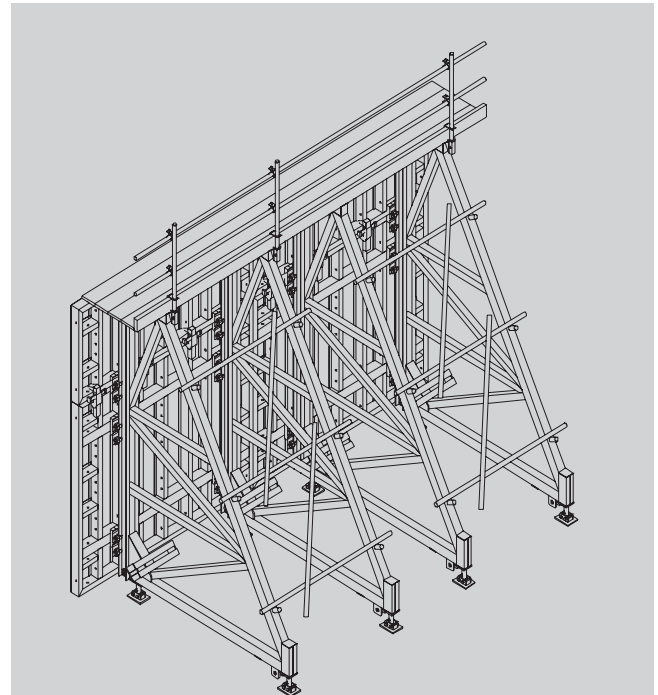

▲ Set of EUC Trusses for heights of 3.6m

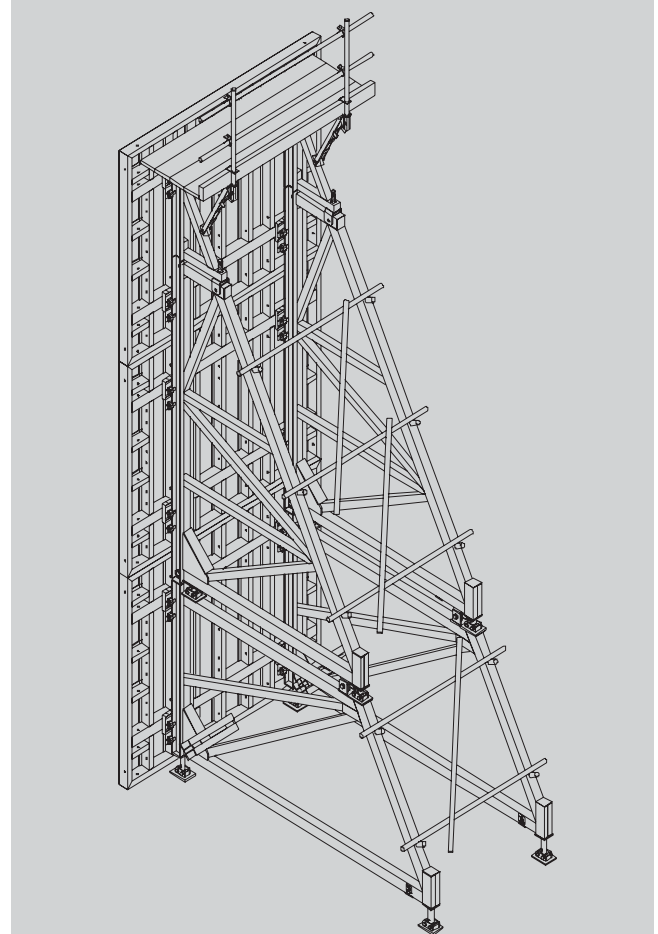

▲ Set of EUC Trusses for heights of 5.4m

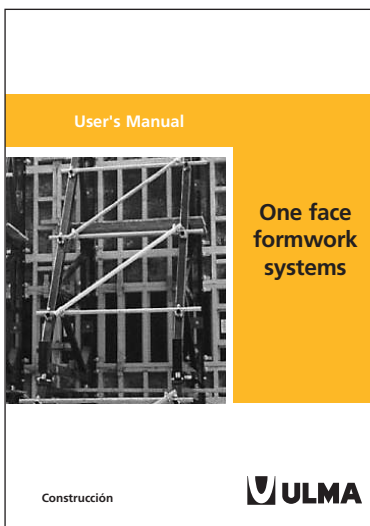

▲ For further information, see the UCAB-EUC User's Manual


■ Climbing

Climbing formwork rises vertically by stages to build walls that cannot be completed in a single pouring due to their height. Accordingly, a working platform is built at the required height, and the formwork is supported on it.

The **ORMA Climbing Bracket** supports the platform and the formwork.

ORMA Climbing Brackets are used for walls up to 20 m height where maximum pouring height should be 3.9 m. If it is necessary to build higher walls, where pouring height is also higher than 3.9m, ULMA Construcción has other climbing systems appropriate for these specific needs.

ORMA Brackets and ORMA Formwork are moved and lifted separately, connecting the brackets with bracing tubes.

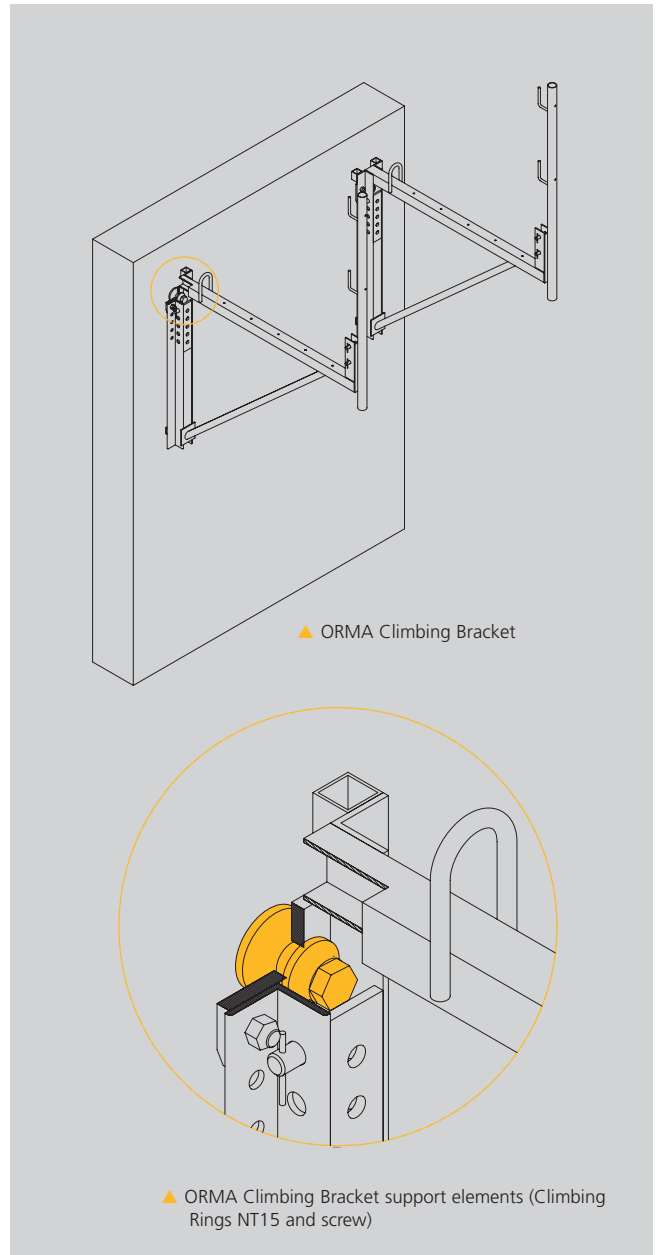

The climbing bracket support on the **Climbing Rings NT15**, should be screwed in to **Cones DW15/M24** embedded that remain in the wall since the previous pouring level.

For architectural walls, it is also possible to use a smaller cone: **Cone AWF**, which is assembled and used in the same way as the Cone DW15/M24.


The cone can be assembled without having to perforate the plywood, by placing it in the panel tie hole position. If the geometrical shape to be executed (holes, windows, etc.) requires fixing the cone at a different height, then the plywood can be perforated.

It is possible to climb on either one or two sides of the wall. If climbing on one face, the inside formwork will be supported by the interior slab. If climbing on both sides of the wall, brackets can be used on both sides, or interior platforms can be directly supported on the wall with gravity pawls (inside elevator shafts, stairs, etc.).


If climbing is required for higher walls and also higher pouring heights, other brackets, that allows moving and lifting together brackets and formwork, should be used because this way assembling **time can be considerably reduced**.



▲ Climbing Bracket support system

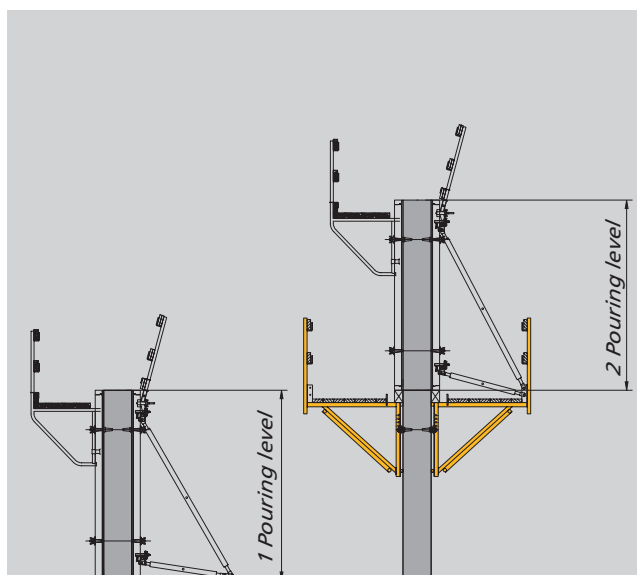


▲ Climbing formwork on two sides of a wall

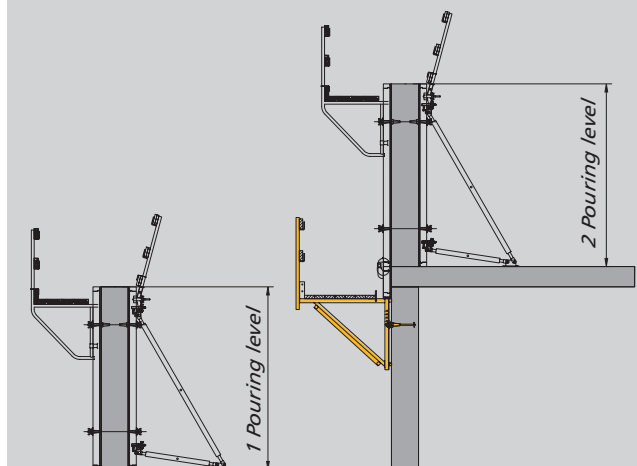

▲ Climbing on the outside of a wall


Among ULMA Construcción's **wide range of brackets**, the proper mode can be selected based on the following criteria: platform width, formwork surface, cone recovering platform and roll-back system...

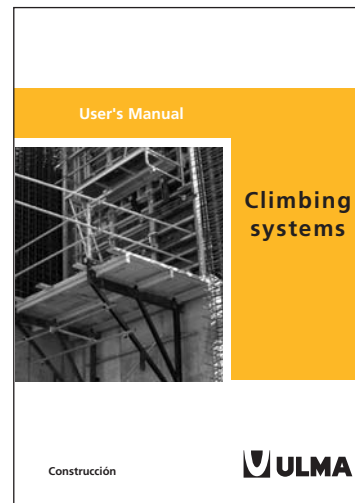

▶ For further information refer to the CLIMBING SYSTEMS User's Manual.




Foundations

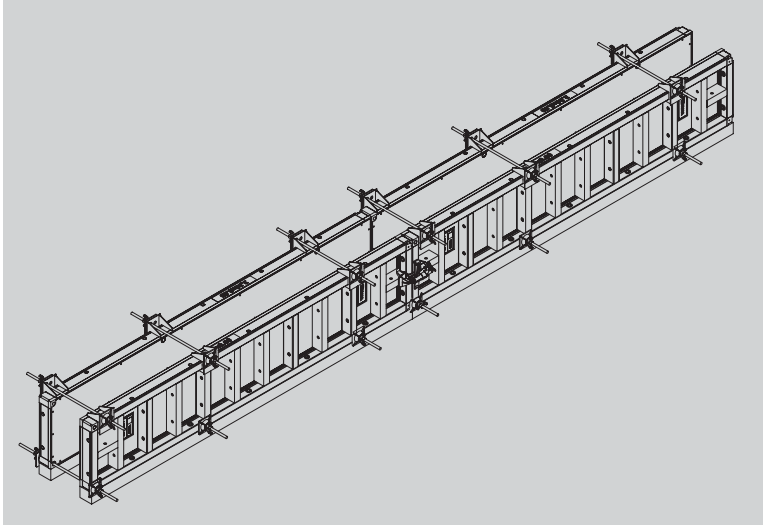


Foundations can be framed tying the panels in a variety of ways.

When it is not possible to use standard tie rods in the foundation:

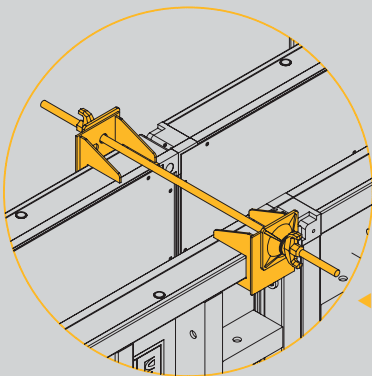


Fasten the upper part of panels with tie rods using top tie bracket 65

Tie panels horizontally in longitudinal foundations:

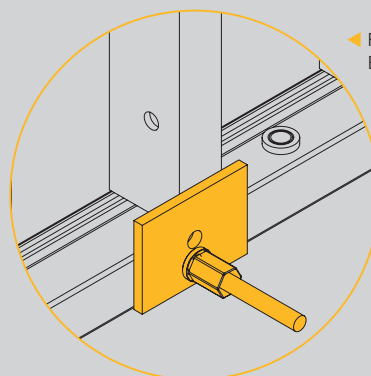


Fasten tie rods with Eccentric Plate.

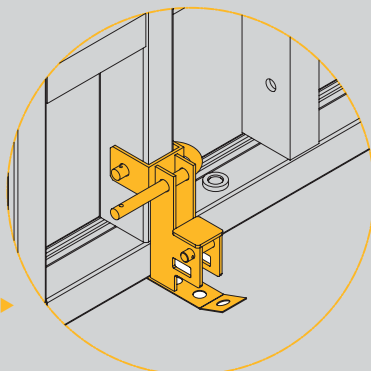

Fasten the lower part of panels with foundation plate and foundation head.

Fasten the lower tie rod with Plate Washer Nut. In these cases, it is also necessary to chock the panel.

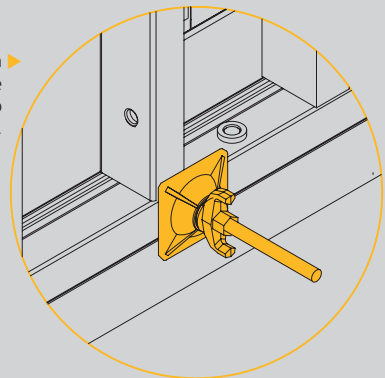

■ Other solutions

▣ Elevator shafts



▣ Polygonal walls



▣ Inclined walls



▣ Compatibility with BIRA circular formwork for obtaining straight and curved walls



ORMA VERTICAL MODULAR FORMWORK

- Compatibility with the ENKOFORM V-100 vertical formwork



- Solution for ORMA column to be fixed with Walers DU-100 as a collar.



- Large gangs of ORMA panels with Walers DU-100



► Handling and repair

An easy to use system

■ Shipping and handling

Material should be handled and transported with the proper auxiliary equipment, after marking off the work area and stopping the flow of pedestrian traffic in the area.

Transport small elements in crates or boxes to avoid losing them.



■ Stacking

Stack the plywood panels in such a way as to avoid damaging them.

Place the panels on top of frames in order to maintain order, cleanliness and distribution. At this point, store the panel packets, alternating a block between them after use.



■ Lifting

Individual panels or gangs of panels always have to be lifted using ORMA Lifting Hook. It is recommended to use two hooks with the proper fixing to the panel.



■ Assembly

Assemble the panels horizontally after placing planks or wood sills on the ground.

Before pouring, steep the plywood surface with release agent.



■ Disassembly

Once materials have been stripped, clean the panels and store them properly.



■ Maintenance

Different components have to be cleaned and scraped on the jobsite as soon as they have been stripped. Before any pouring, steep the plywood with release agent as previously explained.



■ Repairing

ULMA Construcción has specific equipments for cleaning, repairing panels and replacing plywood.




Components and accessories

Main panels

Range 2,70

	WEIGHT (kg)	CODE
Panel 2,7x2,4 (6,48 m ²)	363	1900002
Panel 2,7x1,2 (3,24 m ²)	167	1900005
Panel 2,7x0,9 (2,43 m ²)	134	1900008
Panel 2,7x0,75 (2,03 m ²)	120	1900487
Panel 2,7x0,6 (1,62 m ²)	105	1900011
Panel 2,7x0,45 (1,21 m ²)	86	1900020
Panel 2,7x0,3 (0,81 m ²)	69	1900029

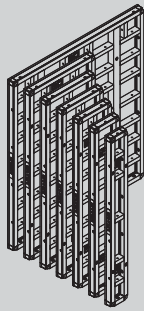


Range 1,20

	WEIGHT (kg)	CODE
Panel 1,2x1,2 (1,44 m ²)	89	1900032
Panel 1,2x0,9 (1,08 m ²)	70	1900035
Panel 1,2x0,75 (0,9 m ²)	62	1900490
Panel 1,2x0,6 (0,72 m ²)	54	1900038
Panel 1,2x0,45 (0,54 m ²)	42,3	1900047
Panel 1,2x0,3 (0,36 m ²)	34,5	1900056



Column Panel

	WEIGHT (kg)	CODE
Column Panel 2,7x1,32 (3,56 m ²)	213	1900341
Column Panel 2,7x0,92 (2,48 m ²)	159	1900509
Column Panel 2,7x0,72 (1,94 m ²)	134	1900354
Column Panel 1,2x1,32 (1,58 m ²)	100	1900344
Column Panel 1,2x0,92 (1,1 m ²)	74	1900515
Column Panel 1,2x0,72 (0,86 m ²)	62	1900357
Column Panel 0,6x1,32 (0,79 m ²)	58	1900347
Column Panel 0,6x0,92 (0,55 m ²)	43,3	1900518
Column Panel 0,6x0,72 (0,43 m ²)	35	1900360

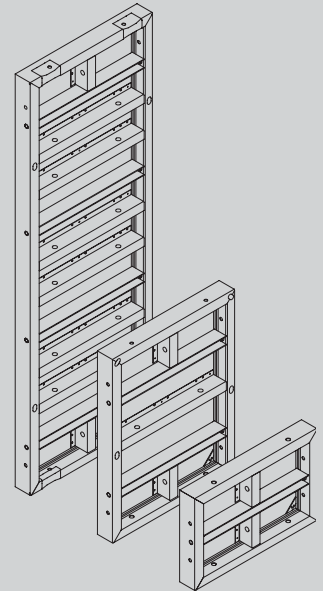

Corners

Inside Corner

Inside Corner 2,7 (1,62 m²)
Inside Corner 1,2 (0,72 m²)

WEIGHT (kg)


CODE

100

1900089

48,7

1900156

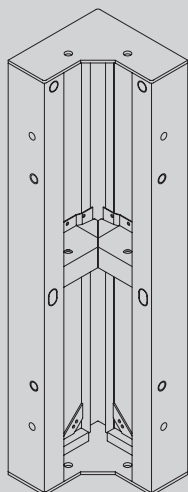

Inside Hinged Corner

Inside Hinged Corner 2,7 (1,62 m²)
Inside Hinged Corner 1,2 (0,72 m²)

WEIGHT (kg)


CODE

118

1900096

55

1900164

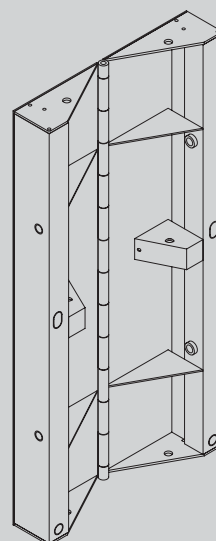

Outside Corner


Outside Corner 2,7
Outside Corner 1,2

51

1900932

22,9

1900936

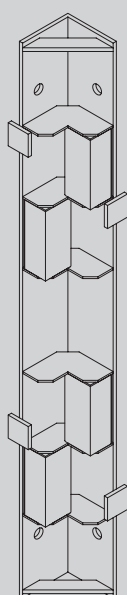

Outside Hinged Corner


Outside Hinged Corner 2,7 (0,27 m²)
Outside Hinged Corner 1,2 (0,12 m²)

77

1900110

34,8

1900194

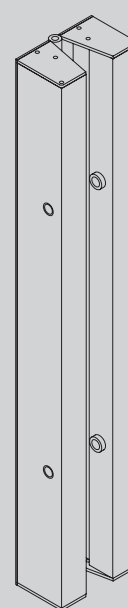

Compensation

Compensation Tube

Compensation Tube 2,7 (0,14 m²)
Compensation Tube 1,2 (0,06 m²)

WEIGHT (kg)	CODE
20,2	1900216
9	1900217



Wooden Profile

Wooden Profile 2,7
Wooden Profile 1,2


WEIGHT (kg)	CODE
10,8	1900439
5,3	1900440



Compensation Plate

Compensation Plate 2,7 (0,81 m²)
Compensation Plate 1,2 (0,36 m²)

39,8	1900423
18,8	1900428

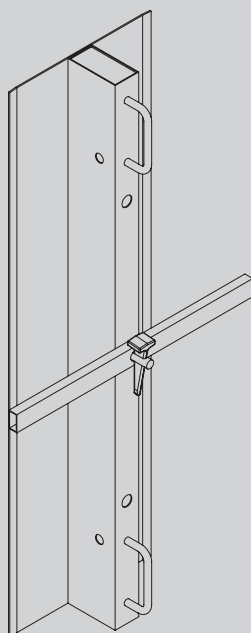


Wooden Compensation




Wooden Compensation 2,7x0,05
Wooden Compensation 2,7x0,03
Wooden Compensation 2,7x0,02

8,3	1900443
6,2	1900442
4	1900441
9,1	1900494




Beveled Wood
(Half piece 1900444)

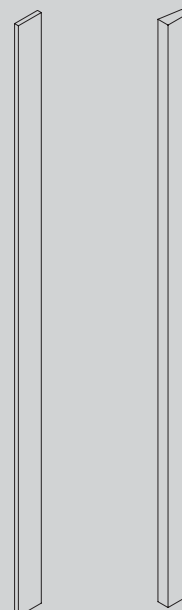







Tying Elements-Lifting

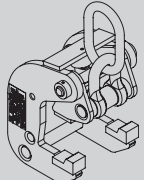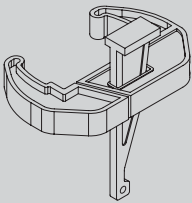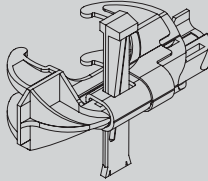	WEIGHT (kg)	CODE
Lifting Hook ORMA	10,6	1900179
		
Fixed Clamp	2,9	1900894
		
Adjustable Clamp	5,5	1900170
		




Gang


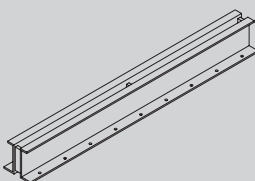
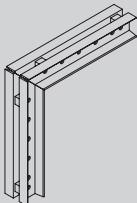
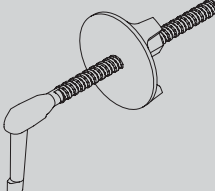
	WEIGHT (kg)	CODE
Waler		
Waler 0,9	10,9	1900193
Waler 1,55	18,6	1900445
		
L Waler	24,6	1900538
		
Waler Hook	1,4	1900448
		

Push-pull Props-stabilizing

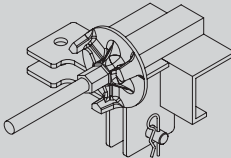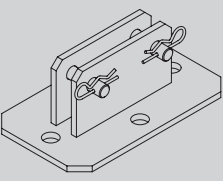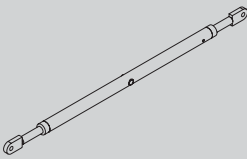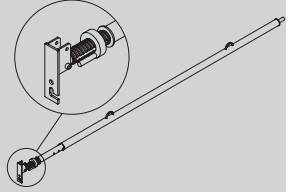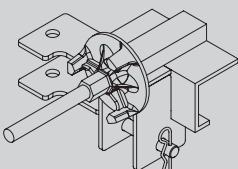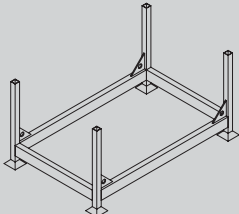
	WEIGHT (kg)	CODE
Head 60	4,5	1900119
		
Push-pull Prop Shoe	4,3	1900144
		
Push-pull Prop		
Push-pull Prop 1,1-1,7	7,8	1900134
Push-pull Prop 2,4-3,5	24,2	1900123
Push-pull Prop 3,6-4,8	43,3	1908168
Push-pull Prop 5-6	51	1900147
		
Push-pull Prop 6-10	99	1900207
		
Push-pull Prop Head 6-10	4,6	1902219
		
Push-pull Prop Pallet 6-10	61,5	1900411
		

Work Platforms - Safety

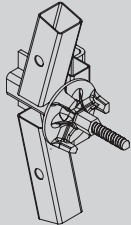
	WEIGHT (kg)	CODE
Post Bracket	3,5	1900941
		
Safety Handrail Post S-V	3,9	1860516
		
Handrail Post	3,4	1902210
		

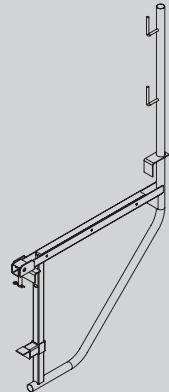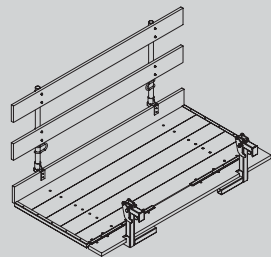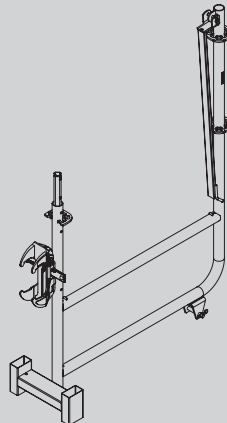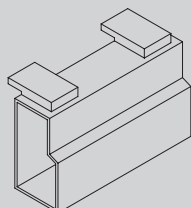	WEIGHT (kg)	CODE
Walkway Bracket	14,8	1861094
		
ORMA Platform 2.4 x 1.2	163	1908171
		
ORMA-BRIO Bracket	27,1	1900908
		
Tying Profile	2,3	1900890
		


	WEIGHT (kg)	CODE
Platform		
Platform 3	22,2	2127713
Platform 2,5	20,2	2127714
Platform 2	17	2127715
Platform 1,5	12,4	2127716
Platform 1,02	9	2127717
Platform 0,7	6,6	2127718

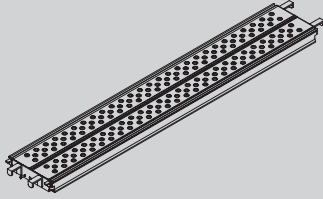


Trapdoor platform		
Trapdoor platform 3	31	2127712
Trapdoor platform 2,5	25,8	2127867
Trapdoor platform 2	18,6	2127868
Trapdoor platform 1,5	13,5	2128152
Trapdoor platform 1,02	7,9	2129617

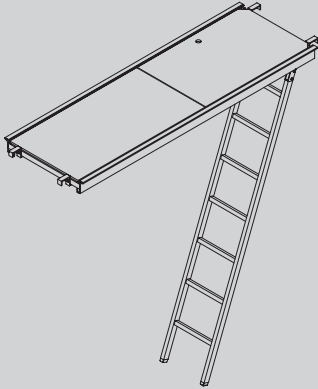


Ledger		
Ledger 3	11,6	2127527
Ledger 2,5	9,4	2127526
Ledger 2	7,6	2127525
Ledger 1,5	6	2127524
Ledger 1,02	4,4	2127523
Ledger 0,7	3,2	2127522

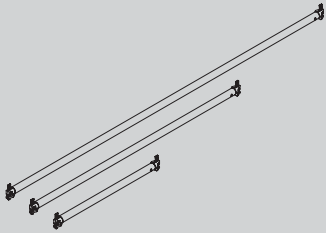


Standard 0.5 w/Socket	WEIGHT (kg)	CODE
	2,2	2127958

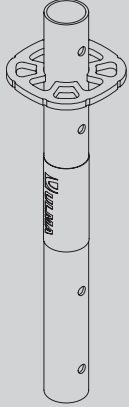


Toeboard		
Toeboard 3	6,8	2124997
Toeboard 2,5	6	2124996
Toeboard 2	5,2	2124995
Toeboard 1,5	4,2	2124994
Toeboard 1,02	3,2	2124999
Toeboard 0,7	2,6	2124998

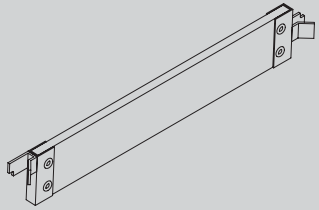






Extensible Platform		
Extensible Platform 2-2,5	20,5	2067043
Extensible Platform 1,5-2,35	17,3	2067048
Extensible Platform 1-1,5	12,5	2067035

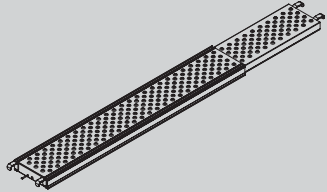






Telescopic Ladder Supplement	12,2	1908363
-------------------------------------	------	---------





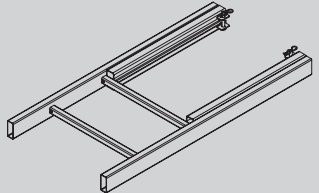







Climbing

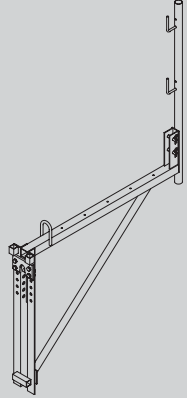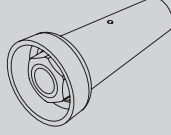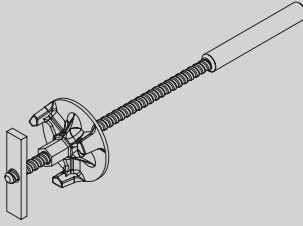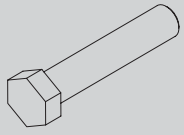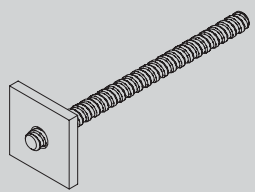	WEIGHT (kg)	CODE
ORMA Climbing Bracket	36,5	1900386
		
Cone DW 15/M24	1	1901080
		
Climbing Ring 15	0,8	1901083
		
Cone-Waler Connector	1,95	1901245
		
Hexagonal Screw M24x120 DIN931-10.9	0,54	9053013
		
Lost Tie 15/0,25	0,7	1900738
		


Anchors

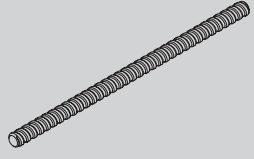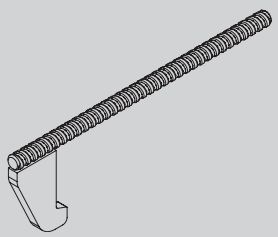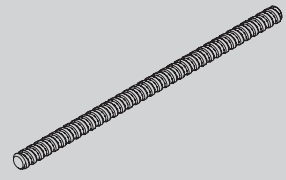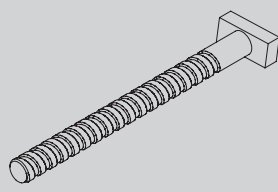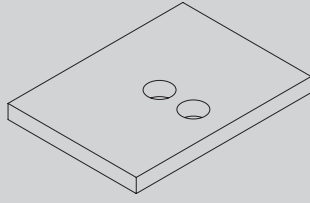
	WEIGHT (kg)	CODE
Tie Rod		
Tie Rod 15/1	1,4	0230100
Tie Rod 15/1,2	2	0230120
Tie Rod 15/1,5	2,5	0230150
Tie Rod 15/2	3,3	0230200
Tie Rod 15/6	10	0230600
Tie Rod 20/1	2,9	0234100
Tie Rod 20/1,2	3,4	0234120
Tie Rod 20/1,5	4,3	0234150
Tie Rod 20/2	5,2	0234200
Tie Rod 20/6	17,2	0234600
		
Bulkhead Hook	0,91	1900227
		
Pin		
Pin 0,35	0,6	1861033
Pin 0,55	0,8	1861034
		
Panel Bolt	0,39	1861122
		
Eccentric Plate	1,4	1861692
		

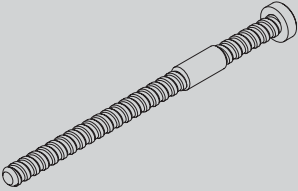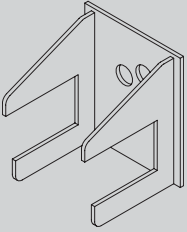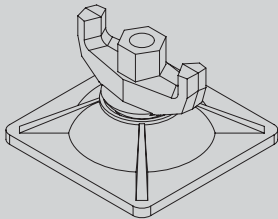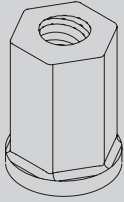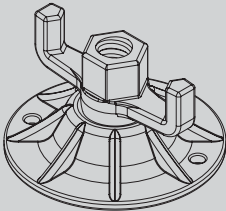
	WEIGHT (kg)	CODE
Universal Panel Bolt	0,6	1900265
		
Top Tie Bracket 65	1,8	1900929
		
Plate Washer Nut 15	1,2	1900256
		
Hexagonal Nut 15	0,22	7238001
		
Plate Washer Nut 20	1,2	1905160
		

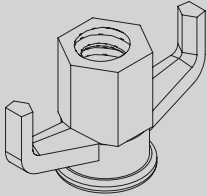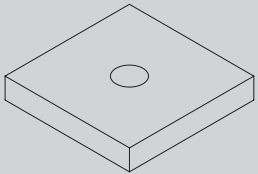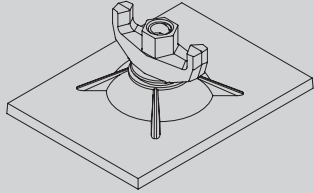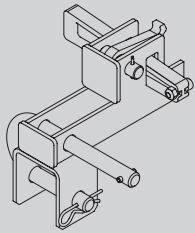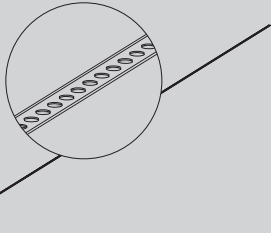
	WEIGHT (kg)	CODE
Wing Nut 20	0,37	1905046
		
Base Plate D20	2,2	1905047
		
Plate Nut D15 200x150	2,6	1908158
		
Foundation Head	3,4	1908229
		
Foundation Plate 25	16,6	1850453
		


Consumable parts

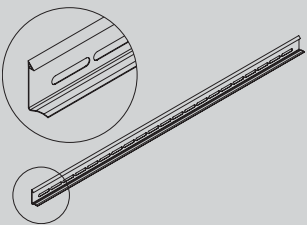
	WEIGHT (kg)	CODE
Chamfer Strip- 3,3 m (16 units)	0,51	1908535
		

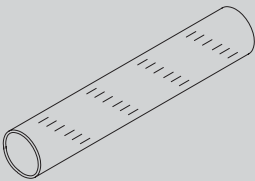
Spacer Tube		
Spacer Tube 22/25 (75 ml) (for 15 Tie Rod)	0,3	7230455
Spacer Tube 22/26 (100 ml) (for 15 Tie Rod With Water Stop Cap)	0,4	7238047
Spacer Tube 26/29 (50 ml) (for Fix Anchor DW15)	0,25	1905814
Spacer Tube 32/36 (50 ml) (for 20 Tie Rod/ Fix Anchor DW15)	0,3	9371968
		

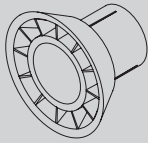
Cone terminal		
Cone terminal 22 (250 units)	0,006	7230264
Cone terminal 26 (250 units)	0,007	7238048
Cone terminal 32 (250 units)	0,03	9371967
		

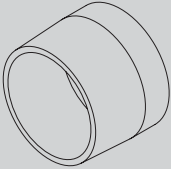Plug		
Plug 20 (250 units) (for ORMA, Versat, Comain, LGR Columns)	0,003	1861799
Plug 22 (250 units)	0,003	1900159
Plug 25/30 (250 units) (for ORMA Panels)	0,003	1900213
Water stop Plug 26 (250 units)	0,004	7238050
Plug 30 (250 units)	0,004	7238046
		

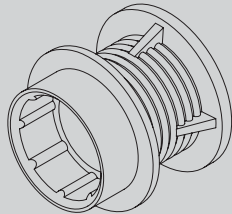	WEIGHT (kg)	CODE
Water Stop Cap 26 (250 units)	0,009	7238049
		

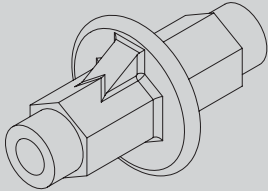Water Stop DW15	0,61	0230004
		

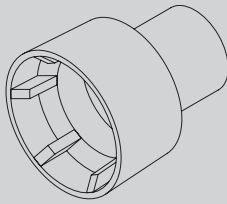Water Stop Adapter DW15	0,1	9371966
		

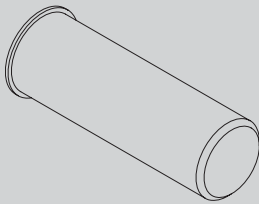Lateral Plastic Sleeve	0,008	1908298
		

Production Plant

ULMA C y E, S. Coop.

Ps. Otadui, 3 – Apdo. 13
20560 OÑATI (Guipúzcoa)
SPAIN
Phone: +34 943 034900
Fax: +34 943 034920
www.ulma-c.com

ULMA Worldwide

EUROPE

■ **Germany**
ULMA Betonschalungen und Gerüste GmbH
Kronberger Str. 16
D-63110 RODGAU-DUDENHOFEN
Phone: +49 6106 28677 0
Fax: +49 6106 28677 86
www.ulma-c.de

Nordwest Branch
Stresemannallee 4c
D-41460 NEUSS
Phone: +49 2131 40201 0
Fax: +49 2131 40201 99

Südwest Branch
Manfred – Wörner – Str. 115
D-73037 GÖPPINGEN
Phone: +49 7161 50608 42
Fax: +49 7161 50608 43

■ **France**
ULMA, S.A.R.L.
27, rue Gustave Eiffel
Z.I. de la Marinière
91070 BONDOUFLE
Phone: +33 1 69 11 54 50
Fax: +33 1 69 11 54 54
www.ulma-c.fr

IDF Échafaudages Branch

22 Bis, rue Gustave Eiffel
Z.I. de la Marinière
91070 BONDOUFLE
Phone: +33 1 69 11 63 30
Fax: +33 1 69 11 63 31

IDF Construction Branch

27, rue Gustave Eiffel
Z.I. de la Marinière
91070 BONDOUFLE
Phone: +33 1 69 11 63 40
Fax: +33 1 69 11 63 37

Eguilles Branch

50, allée Meulière
Z.I. – Route de Berre
13510 EGUILLES
Phone: +33 4 42 64 62 30
Fax: +33 4 42 64 62 31

Branch Saint Herblain

11, rue Fondeur
Z.I. du Tisserand
44800 SAINT HERBLAIN
Phone: +33 2 51 80 48 04
Fax: +33 2 51 80 48 05

Branch La Chapelle d'Armentières

Zone Industrielle
Rue André Ampère
59930 LA CHAPELLE
D'ARMENTIÈRES
Phone: +33 3 20 07 11 86
Fax: +33 3 20 07 11 68

Branch Tarnos

40, rue de l'Industrie
Z.I. de Tarnos
40220 TARNOS
Phone: +33 5 59 64 44 45
Fax: +33 5 59 64 44 84

■ Italy

ALPI, S.P.A.
Zona Industriale Est
I-39035 MONGUELFO (BZ)
Phone: +39 0474 947 400
Fax: +39 0474 947 499
www.alpionline.net

■ Kazakhstan

ULMA Kazajistán
01000 ASTANA
6/2, Tashenova St. 4th floor,
offices 7,9
Phone/Fax: +7 7172 58 05 19
Phone: +7 7172 37 93 48
www.ulma-c.kz

Poland

■ **ULMA Construccjon Polska S.A.**
03-115 WARSAW
ul. Klasyków 10
Phone: +48 22 506 70 00
Fax: +48 22 814 31 31
www.ulma-c.pl

Białystok Branch

15-100 BIAŁYSTOK
ul. 1. Armii Wojska Polskiego 9,
lok. 203
Phone: +48 85 676 73 00
Fax: +48 85 675 06 53

Olsztyn Office


10-467 OLSZTYN
ul. Sprzętowa 3, lok. 18
Phone: +48 89 537 73 10
Fax: +48 89 532 04 95

Gdansk Branch

80-298 GDAŃSK
ul. Budowlanych 27
Phone: +48 58 522 78 00
Fax: +48 58 667 02 04

Szczecin Branch

70-676 SZCZECIN
ul. Gerarda Merkatora 7
Phone: +48 91 485 77 30
Fax: +48 91 462 34 63

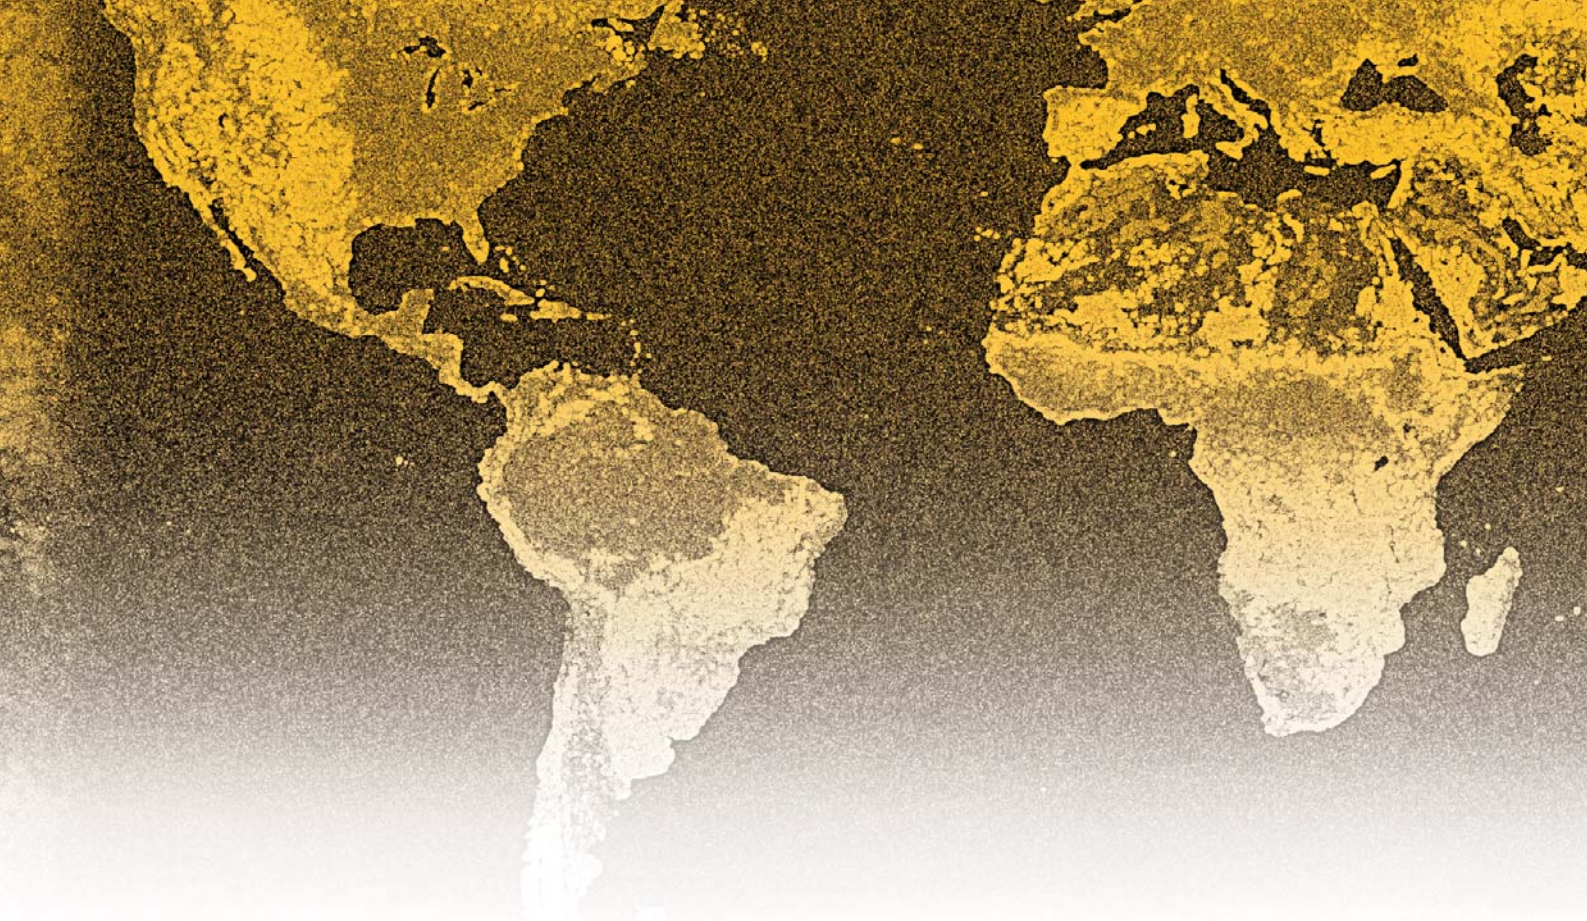**Katowice Branch**

40-203 KATOWICE
al. Roździeńskiego 188b
Phone: + 48 32 356 74 80
Fax: + 48 32 353 33 90

Kraków Branch

31-670 KRAKÓW
ul. Powstańców 66
Phone: + 48 12 620 73 70
Fax: + 48 12 647 34 22

Lublin Branch

20-327 LUBLIN
ul. Wrońska 2
Phone: + 48 81 749 72 90
Fax: + 48 81 744 04 90

Łódź Branch

94-250 ŁÓDŹ
ul. Żniwna 4/8
Phone: + 48 42 666 73 20
Fax: + 48 42 650 03 25

Poznań Branch

61-317 POZNAŃ
ul. Ostrowska 484
Phone: + 48 61 838 75 30
Fax: + 48 61 863 01 60

Bydgoszcz Branch

85-831 BYDGOSZCZ ul. Torunska
278
Phone: + 48 52 323 76 80
Fax: + 48 52 345 25 65

Warszawa Branch

03-197 WARSZAWA
ul. Laurowa 39
Phone: + 48 22 506 72 50
Fax: + 48 22 747 19 10

Wrocław Branch

50-541 WROCŁAW
ul. Armii Krajowej 53
Phone: + 48 71 391 76 30
Fax: + 48 71 367 30 90

Nowa Sól Branch

67-100 NOWA SÓL
ul. Kościuszki 29
Phone: + 48 68 376 77 60
Fax: + 48 68 387 02 21 wew. 357

Portugal**ULMA Portugal Lda**

Zona Industrial - Rua A, s/n
Vale de Figueira
2695 SÃO JOÃO DA TALHA
LISBON
Phone: + 351 219 947 850
Fax: + 351 219 558 022
www.ulma-c.pt

Porto Branch

Zona Industrial da Feiteira
Rua das Casas Queimadas
717 Grijó
4415-439 VILA NOVA DE GAIA
OPORTO
Phone: + 351 227 418 820
Fax: + 351 227 418 829

Romania**ULMA Cofraje s.r.l.**

Sos Chitilei, 200
012405 - Sector 1 - BUCHAREST
Phone: +40 31 425 13 22 / 23
Fax: +40 31 425 13 24
www.ulma-c.ro

Russia**ULMA Rusia**

107005 MOSCOW
9/23, 2nd Baumanskaya St.
Phone/Fax: + 7 495 777 94 73
Phone: + 7 495 777 94 72
www.ulma-c.ru

Ukraine**ULMA Formwork Ukraine Ltd.**

01013 KIEV
3, Derevoobrobna St.
Phone: + 380 44 255 14 92
Fax: + 380 44 255 14 94
www.ulma-c.com

Production Plant

ULMA C y E, S. Coop.

Ps. Otadui, 3 – Apdo. 13
20560 OÑATI (Guipúzcoa)
SPAIN
Phone: +34 943 034900
Fax: +34 943 034920
www.ulma-c.com

ULMA Worldwide

AMERICA

■ Argentina **ULMA Andamios y Encofrados Argentina, S.A.**

Bernardo de Irigoyen 722 6A
CP1072AAP FEDERAL CAPITAL CITY
Phone/Fax: + 541 14 3425132
www.ulma-c.com.ar

■ Brazil **ULMA Brasil - Fôrmas e Escoramentos Ltda.**

Rua Dr. João Dias Ribeiro, 210
Jd. Sagrado Coração de Jesus
Itapevi – SP
CEP: 06693-810
Phone/Fax: + 55 11 3883 1300
Phone/Fax: + 55 11 4619 1300
www.ulma-c.com.br

Río de Janeiro Branch

Rua Sargento Silva Nunes, 137
Ramos – RJ
CEP 21040-231
Phone/Fax: +55 21 2560 2757
Phone/Fax: +55 21 2560 5541

Centro-Oeste Branch

Quadra 3, Lotes 680/700
Setor Industrial Leste
Gama – Brasília DF
CEP: 72445-030
Phone/Fax: +55 61 3556 6226

Sur Branch

Rua Dr. João Inácio, 195/199
Navegantes – Poa RS
CEP:90230-180
Phone/Fax: +55 51 3337 1003

■ Chile **ULMA Chile - Andamios y Moldajes, S.A.**

Vizcaya nº 325 - Pudahuel
(Ruta 68, Camino Noviciado)
SANTIAGO
Phone: + 56 2 5990530
Fax: + 56 2 5990535
www.ulma-c.cl

Norte Branch

General Borgoña 934 of. 70
ANTOFAGASTA
Phone: +56 5 5246770
Fax: +56 5 5246960

Sur Branch

O'Higgins 940 of. 904
CONCEPCIÓN
Phone: +56 4 12522930
Fax: +56 4 12228321

■ USA

ULMA Form Works, Inc.

58 Fifth Avenue – Hawthorne
NEW JERSEY 07506
Phone: + 1 973 636 2040
Fax: + 1 973 636 2045
www.ulma-c.us

West (Phoenix) Branch

1530 West Houston Avenue
Gilbert, ARIZONA 85233
Phone: + 1 480 304 4942
Fax: + 1 480 304 4948

Mid-Atlantic (Baltimore) Branch

8235 Patuxent Range Road
Jessup, MARYLAND 20794
Phone: + 1 443 296 9852
Fax: + 1 443 296 9860

■ Mexico

ULMA Cimbras y Andamios de México S.A. de C.V.

Vía Gustavo Baz Prada 2160
Acceso 5
54060 Col. La Loma
TLALNEPANTLA
(Mexico State)
Phone: + 52 55 5361 6783
Fax: + 52 55 2628 3549
www.ulma-c.com.mx

■ Peru

ULMA Encofrados Perú, S.A.

Av. Argentina 2882
LIMA
Phone: +51 1 613 6700
Fax: +51 1 613 6710
www.ulma-c.com.pe

Norte Branch

Ctra. Pomalca, km 2,7
Chiclayo- LAMBAYEQUE
Phone: +51 7 460 8181
Fax: +51 7 460 8182

ASIA-AFRICA

■ P.R. China

ULMA Formworks China R.O.

#1009 Fortunegate Mall
1701 West Beijing Xi Road
SHANGHAI, 200040
Phone: +86 21 62887070
Fax: +86 21 62885980
www.ulma-c.com

■ UAE


ULMA Formworks UAE L.L.C.

Plot No. 597- 547
Dubai investments Park
P.O. Box. 282286
DUBAI
Phone: + 971 4 3419970
Fax: + 971 4 3418850
www.ulma-c.com

■ Singapore

ULMA Formwork Singapore PTE. LTD.

2 Senoko Way
758027 SINGAPORE
Phone: + 65 6758 2338
Fax: + 65 6758 8523
www.ulma-c.com

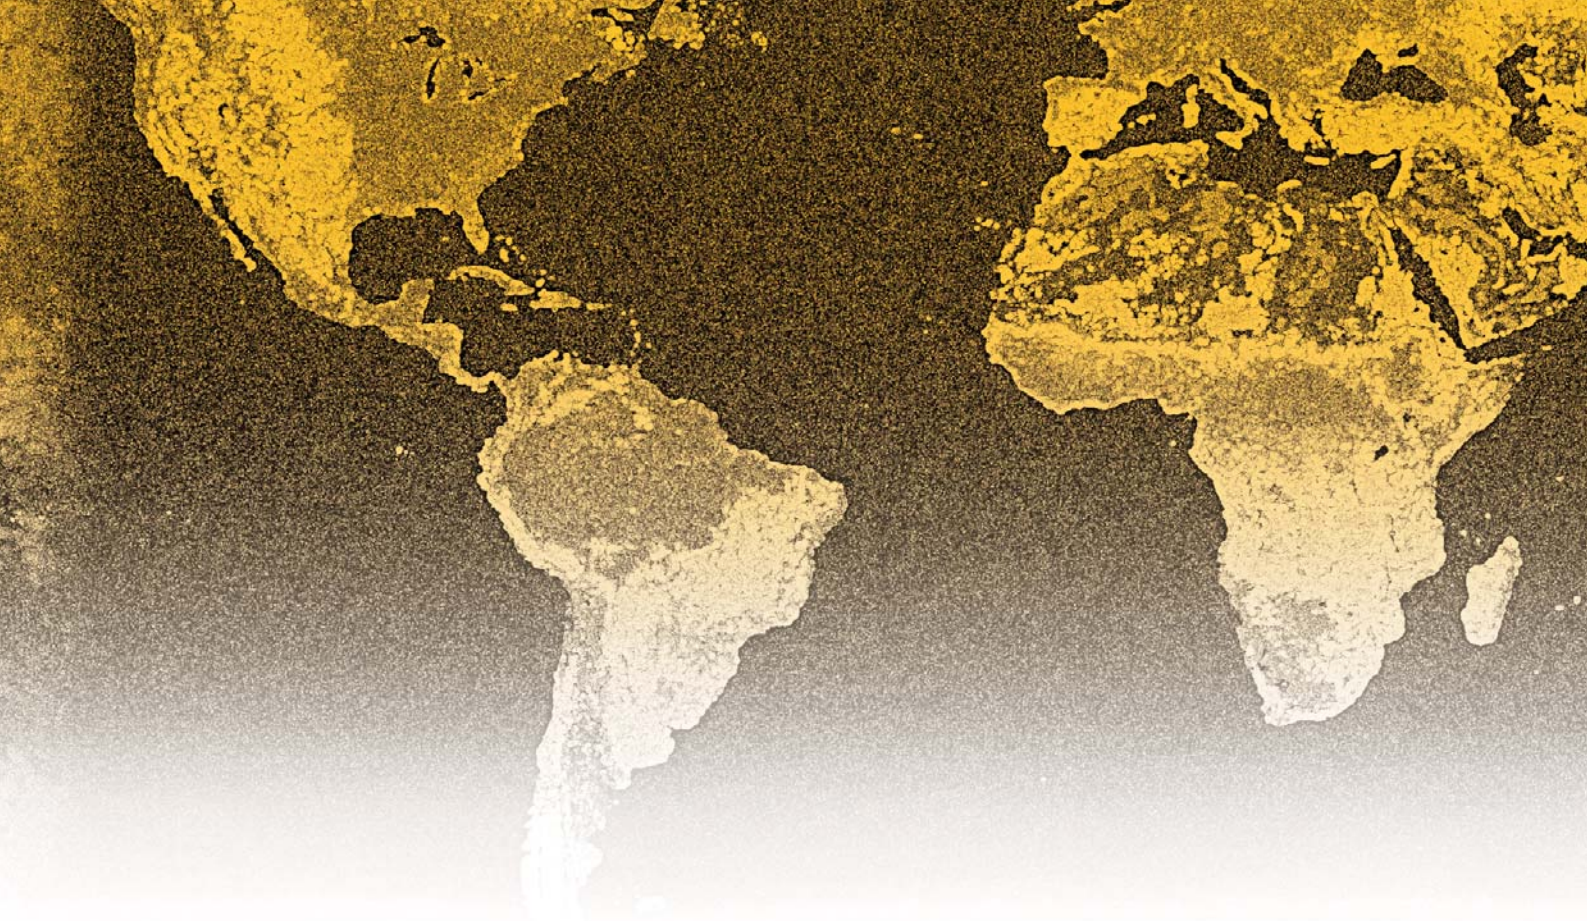

ULMA in Spain

ARAGÓN Branch

Pol. Ind. El Pradillo II
Aneto, 2 - Parcela 23
50690 PEDROLA (Zaragoza)
Phone: 976 654645
Fax: 976 654635

ASTURIAS Branch

Pol. Ind. de Rocas, 5
Gustavo Eiffel, 46
33211 GIJÓN (Asturias)
Phone: 98 5168038
Fax: 98 5167513

BALEARES Branch

Pol. Ind. Son Noguera
Cas Rossos, 12-14
07620 LLUCMAJOR
(Illes Balears)
Phone: 971 669850
Fax: 971 121512

BARCELONA Branch

Pol. Ind. Sud – Est
Pintor Velázquez, 7 y 9
08213 POLINYA (Barcelona)
Phone: 93 7132727
Fax: 93 7133643

CASTILLA - LEÓN Branch

Ctra. Burgos – Portugal, km 116
47270 CIGALES (Valladolid)
Phone: 983 581009
Fax: 983 581021

DERIO Branch

Iturritxualde, 3
48160 DERIO (Vizcaya)
Phone: 94 4521425
Fax: 94 4522468

GALICIA Branch

Pol. Ind. Espíritu Santo
Rua Bell, 24-26
15650 CAMBRE (La Coruña)
Phone: 981 649802
Fax: 981 649060

GRANADA Branch

Camino Nuevo, s/n
18210 PELIGROS (Granada)
Phone: 958 405028
Fax: 958 405328

LAS PALMAS Branch

Pol. Ind. Las Majoreras
Los Llanillos, 33
35259 INGENIO (Las Palmas)
Phone: 928 789212
Fax: 928 789538

MADRID Branch

Pol. Ind. Sur
28863 COBEÑA (Madrid)
Phone: 91 6523199
Fax: 91 6528828

MÁLAGA Branch

Pol. Ind. Villarrosa
Carril de las Serrerías, 32
29004 MÁLAGA
Phone: 952 176389
Fax: 952 231047

MURCIA Branch

Pol. Ind. La Serreta
Calí, s/n
30500 MOLINA DE SEGURA
(Murcia)
Phone: 968 642679
Fax: 968 641276

NORTE Branch

Pol. Ind. Goiaín
Av. San Blas, 1
01170 LEGUTIANO (Álava)
Phone: 945 001100
Fax: 945 001111

SEVILLA Branch

Pol. Ind. Fridex
Autovía Sevilla - Málaga, km 4,2
41500 ALCALÁ DE GUADAIRA
(Sevilla)
Phone: 95 5630044
Fax: 95 5630020

TENERIFE Branch

Pol. Ind. Valle de Güimar
Manzana XIII - Parcelas 21 y 22
38509 GÜIMAR (Tenerife)
Phone: 922 505020
Fax: 922 501101

VALENCIA Branch

Pol. Ind. Los Vientos
Gragal, 7
(Apdo. 96 Moncada)
46119 NÁQUERA (Valencia)
Phone: 96 1399130
Fax: 96 1399096

► Our products

Vertical formworks



ORMA Modular Formwork
A system for large works and high performance



Circular Sheet Formwork BIRA
Formwork system designed for circular wall configurations



ENKOFORM V-100 Bracing System
Wall and Column Formwork with Steel Walers and Timber Beams



LGR Column Formwork
Column formwork using light panels



COMAIN Hand-held Formwork
Modular Formwork that is light and easy to handle by a single person



CLR Circular Column Formwork
Circular column formwork, designed to solve the different column diameters easily.



NEVI Modular Formwork
Vertical handset and gang formwork system



Formwork Climbing Systems
Climbing and self-climbing systems for any height



ULMA

ULMA C y E, S. Coop.

Ps. Otadui, 3-Apdo. 13
20560 OÑATI (Guipúzcoa)
SPAIN
Phone: + 34 943 034900
Fax: + 34 943 034920
www.ulma-c.com